


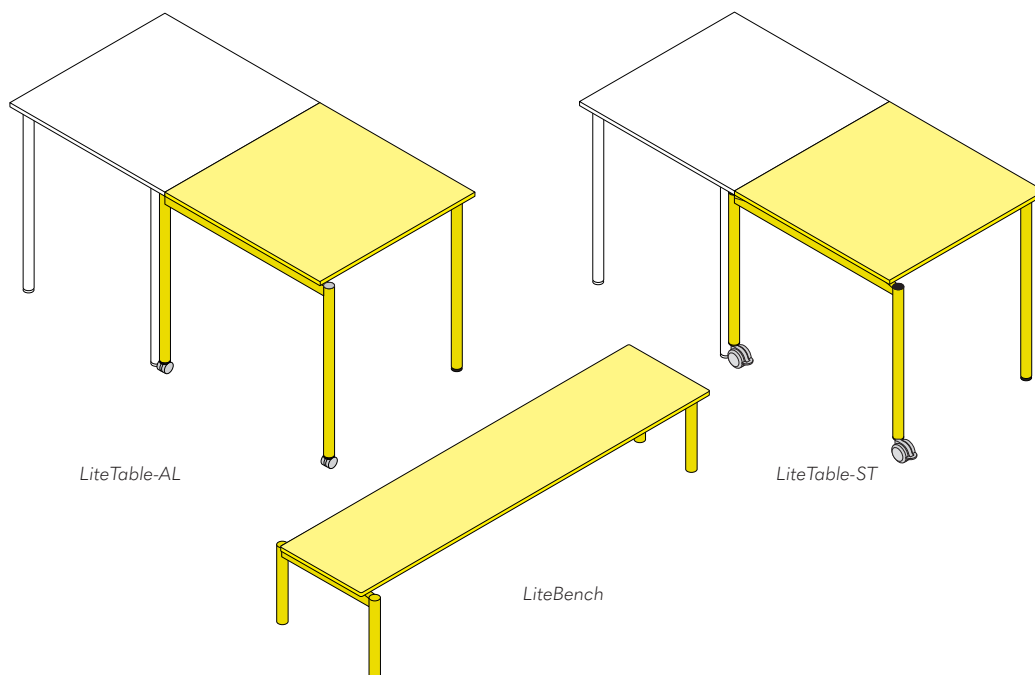

LiteTable-AL

LiteTable-ST

LiteBench

http://links.vs-service.com/downloads/70-145_V07_DEEN_LiteTable.pdf

Instructions for use

Stacking table /- Bench.

LiteTable-AL: 21011-21021

LiteTable-ST: 21090-21095, 21083-21087, 21053-21057

LiteBench: 31083-31087

Intended use: This table is a universal stacking table for variable use for example in office/business, teaching and cafeteria areas, etc. Any other use (e.g. in workshops, storage areas or wet rooms) is classed as non-intended use.

VS Vereinigte Spezialmöbelfabriken GmbH & Co. KG is not liable for damage resulting from such non-intended use.

General note: Please read these instructions and in particular the notes on safety carefully and in full before using the products. Keep the instructions in a safe place for subsequent reference and pass them on to other users.

General note on safety: We use the following symbols and notes in our operating instructions:



Important! This symbol refers to an important note on assembly.



Caution! This symbol refers to a very important note.

On the internet: These instructions can also be downloaded from the internet (see header).

Standards: Tested according to DIN EN 1729-2
Table and seat heights according to 1729-1.

Scope of delivery: The product is delivered fully assembled.

Operation: Follow the instructions on the following pages.


Troubleshooting and service: If faults occur, please contact our Aftersales Service kundenservice@vs-moebel.de

Maintenance and cleaning: On the Internet: vs.de/kataloge/reinigung/en

Forwarding: Also pass on these instructions for use if the product is forwarded to another party.

Disposal: The indicated electric and electronic components must not be disposed of with the ordinary waste. They must be removed from the furniture unit before the unit is sent for disposal. They are to be disposed of at authorized collection and return points.



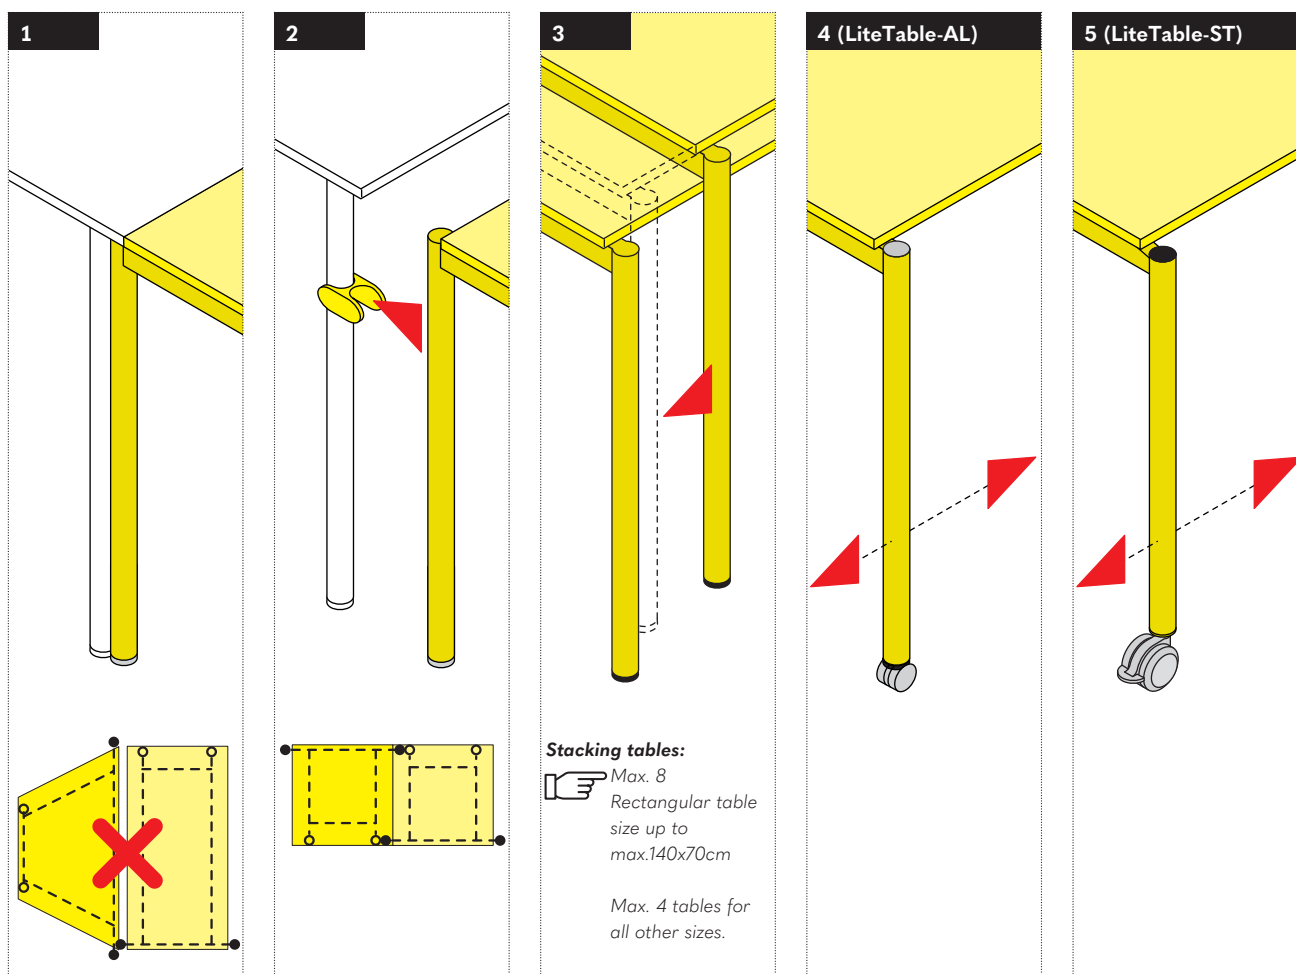

General use.



Caution! Maximum load table 150 kg, version with casters
100 kg. maximum load bench 300 kg

LiteTable combinations: [Fig. 1] The tables can be combined as desired, depending on the model. Here the protruding leg must be located under the table top of the adjoining table. The only exception is the combination with trapezoidal tables and semicircular tables (LiteTable-AL type).

LiteTable connection with table connectors. [Fig. 2] Many combinations can be connected to form a single unit using table connectors.

LiteTable stacking: [Fig. 3] The tables can be stacked. Before stacking, make sure that there are no objects on the table surfaces. When stacking, make sure that the tables are stacked at an offset angle and are pushed up to the end stop.



Caution! When stacking, make sure that the tables, benches are pushed up to the end stop and that the maximum stacking number (max. 8 rectangular tables or max. 4 other table shapes) is not exceeded. Danger of toppling over.

LiteTable with casters: [Fig. 4+5] Prior to moving, make sure that all objects have been removed from the table surface. Only individual tables (free from load) may be moved on casters. To avoid damaging the casters, do not move the tables over door sills or uneven surfaces.



Caution! Lift tables slightly only – risk of toppling over. Move tables on casters individually only.