


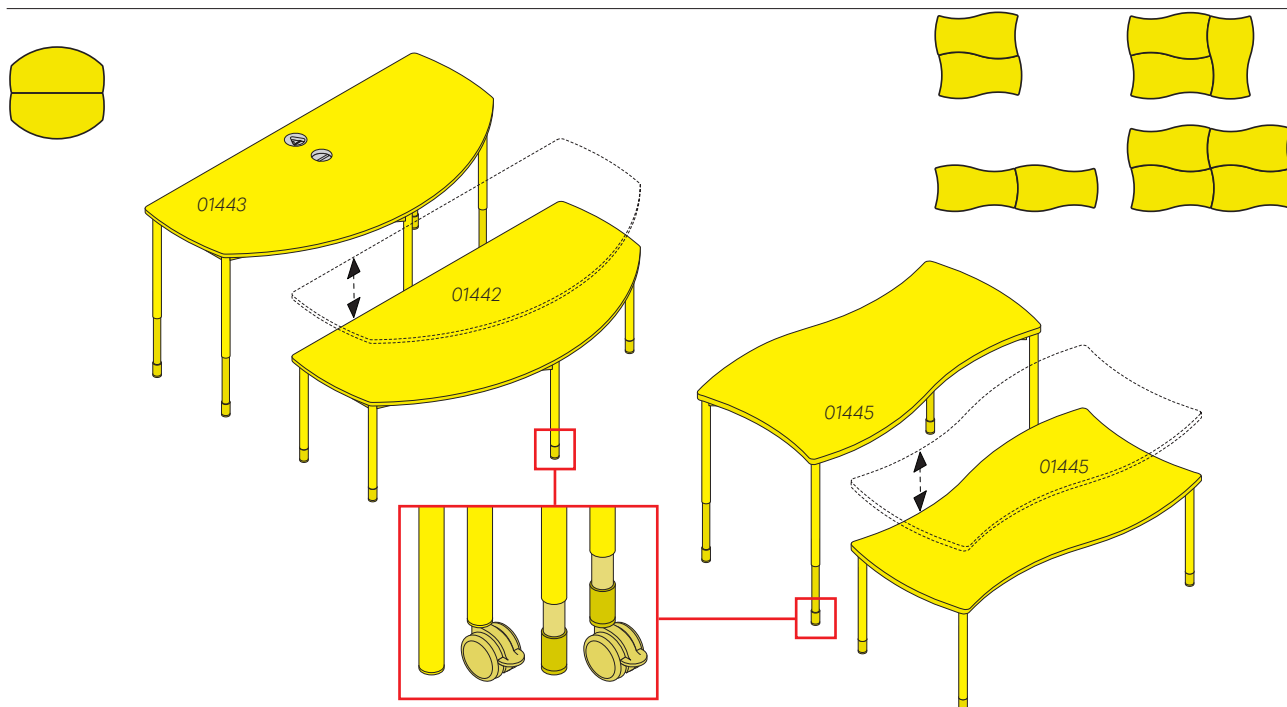

http://links.vs-service.com/downloads/70-215_V05_DEEN_ShiftBase-Gruppen.pdf

Operating Instructions

Shift+ Base free-form tables

Intended use: Free-form tables with glide elements or castors and with or without height adjustment for schools, colleges, seminars and further education establishments. No liability will be assumed for any use other than that intended. Valid for models 01442, 01443, 01445 for use in closed premises. Maximum load: 150 kg.

General note on reading and retaining these Instructions: Read these Instructions and, in particular, the safety instructions carefully before using the products and adhere to these. Keep these Instructions in a safe place for future consultation and communicate them to other users.

General note on safety: The following symbols and notes are used in our Instructions for Use:



Important: This symbol indicates an important assembly note.



Caution!

This symbol indicates a very important note.

On the Web: You can find these Instructions on the Web:

Standards: Inspected in accordance with DIN EN 1729 Parts 1 and 2, size class 2 to 7 or size class 3 to 7 (with height adjustment).

Scope of delivery: The product is supplied fully assembled.

Assembly and initial use: Remove the castor protection before using.



Use: Please take account of the notes on the following pages.

Faults and service: If any faults occur, please contact our Customer Service: kundenservice@vs-moebel.de

Maintenance and cleaning: On the Internet: vs.de/kataloge/reinigung/en

Product transfer and Disposal: If the product is transferred to a new owner or user then it must be accompanied by these Instructions. The indicated electric and electronic components must not be disposed of with the ordinary waste. They must be removed from the furniture unit before the unit is sent for disposal. They are to be disposed of at authorized collection and return points.



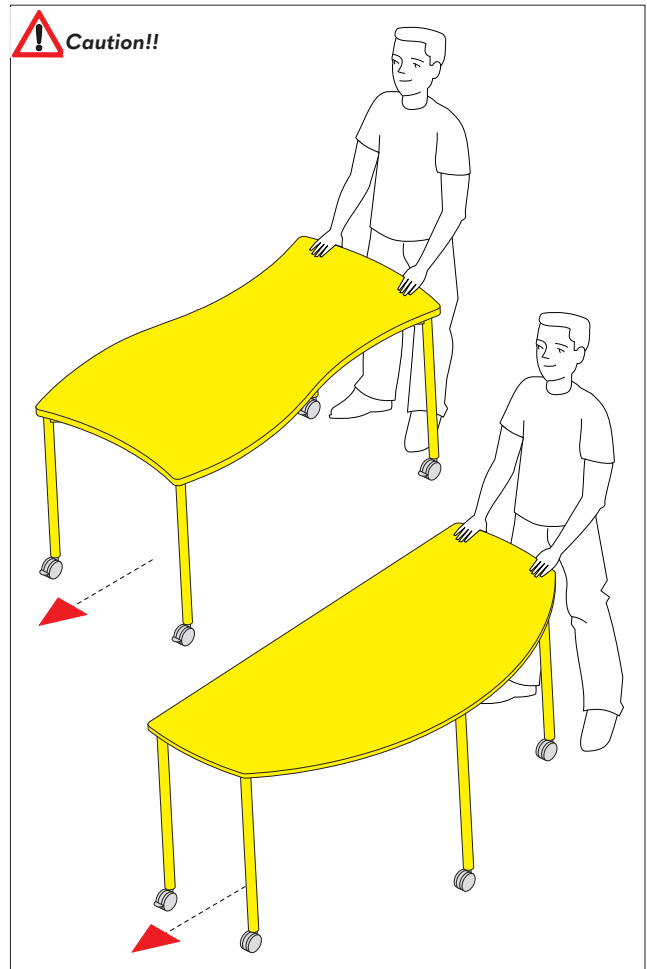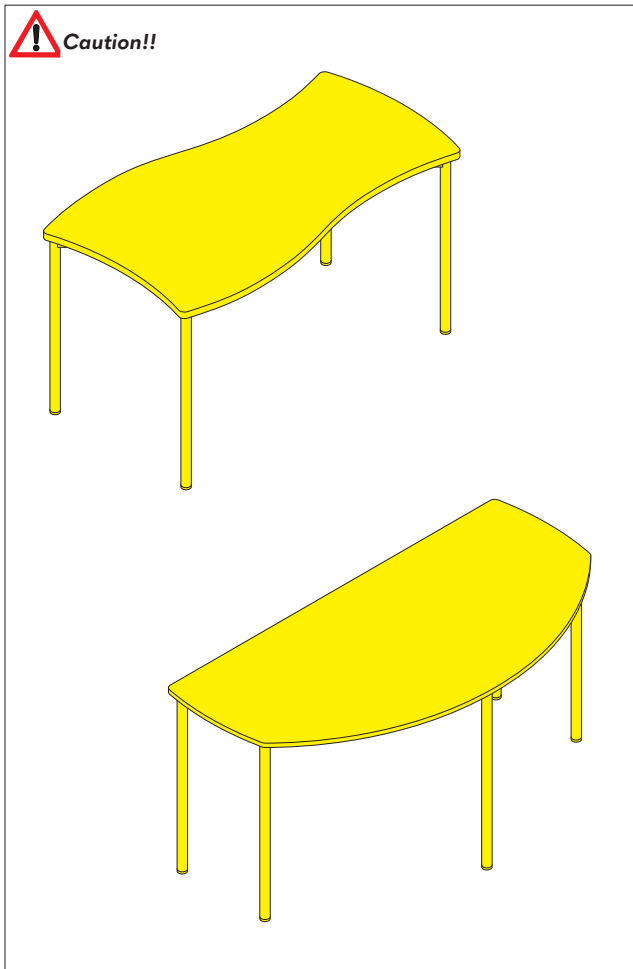

1. Mobility

1.1 Glide elements: Shift+ free-form tables can be equipped with glide elements.

1.2 Castors:


In the case of Shift+ free-form tables with castors it is necessary to release the locking mechanism before moving the tables. When the table has been moved to the desired position, all the castors must be locked again. There must be no load on the table when it is moved – the table top must be free from objects.



(1) Remove the castor protection before use.

(2) Then press the locking mechanism upwards to release it in order to wheel the tables. **(3)** Press the mechanism down again to lock the castors after moving the table to a new location.

Caution! The castors are subject to wear – please check and replace at regular intervals.

Caution! The castors must be locked every time the table is moved to a new location - only then is the table suitable for use.

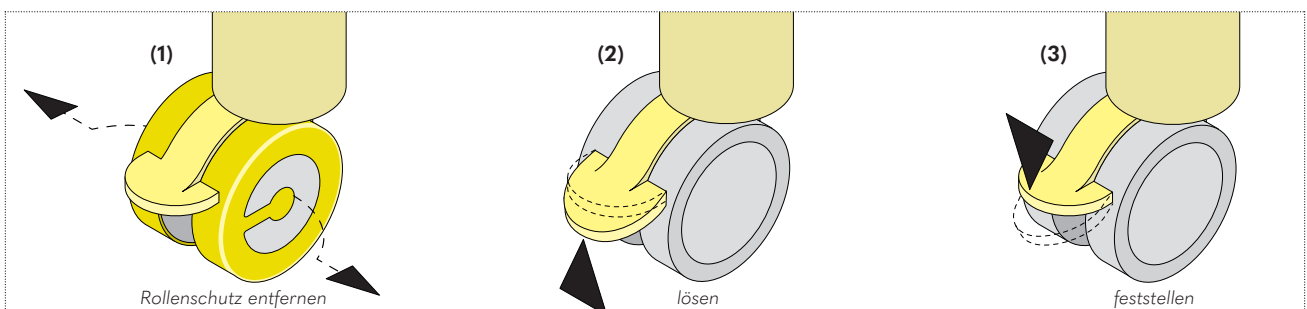

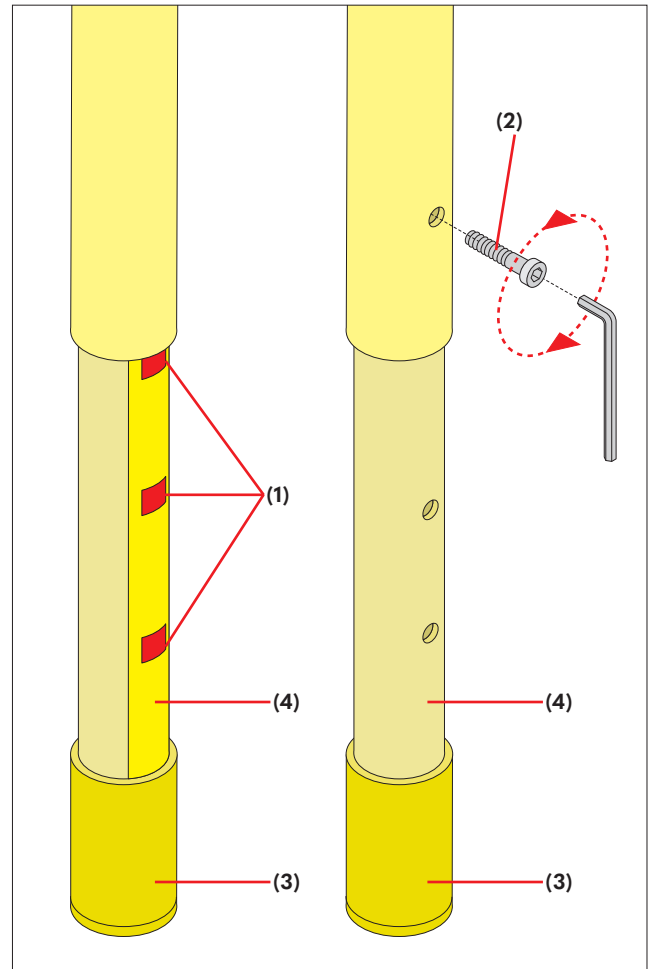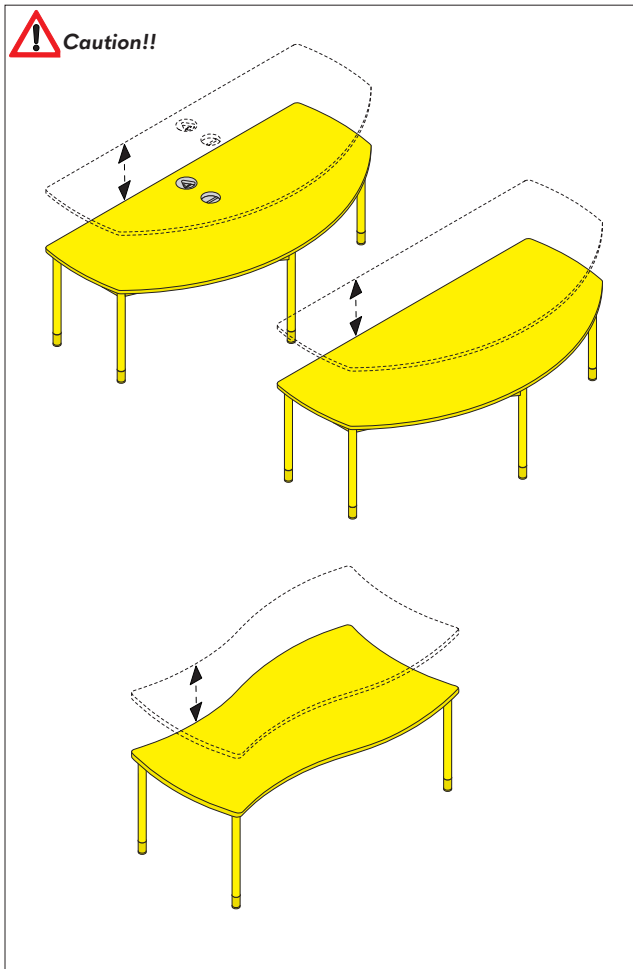


2. Height adjustment: Height-adjustable Shift+ free-form tables are available with glide elements and castors. The height can be set size 3 to 7. The size markings **(1)** are located on the outside of one of the table legs.

The table height is adjusted using the Allen **(2)** on the inside of the table legs. Unscrew the screw **(2)** using an Allen key (size 5) and remove it. Adjust the inside tube **(4)** at the lower leg section **(3)** to the required position, insert the Allen screw and tighten it again.

Caution! There must be no load on the table when the height is adjusted – the table top must be free from objects.

Caution! All the legs of a table must be adjusted to the same height.

Caution! If the table is equipped with castors, these must be locked.

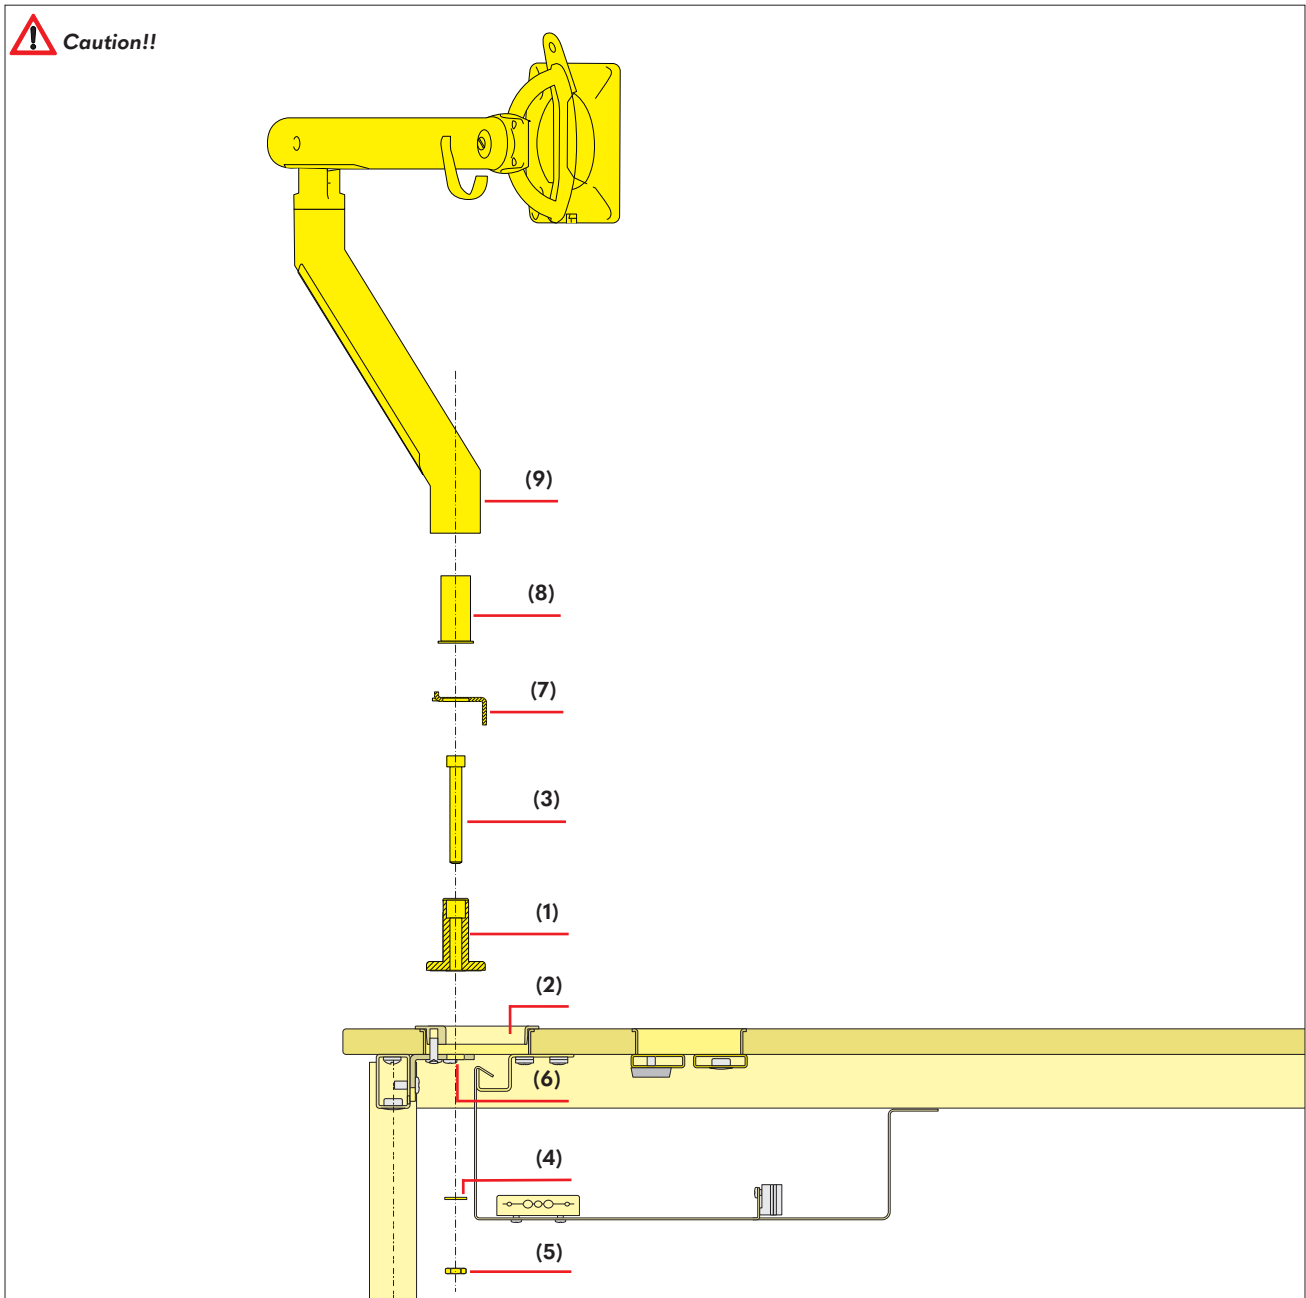

3. Fixing the monitor arm on model 01443

Place the guide pin (1) on the rear cable aperture (2) and fix it with the supplied screw (3); the screw must be passed through both the guide pin and the corresponding opening of the stiffening bracket (6) and fixed with the washer (4) and nut (5). Then put the anti-rotation device (7) on the guide pin.


Caution! The large bevel of the anti-twist device (7) must dip into the cable aperture.

Then put the bearing bush (8) completely over the guide pin. Then attach the monitor arm (9). The monitor's connecting cables must be attached to the monitor arm and fed through the cable aperture into the cable trough.

Caution! Do not squeeze or crush the cable.

Caution! Make sure that the cable is long enough to reach all monitor positions.

For mounting and dismantling the monitor on the monitor arm, as well as for adjusting the monitor arm, please follow the manufacturer's instructions supplied.

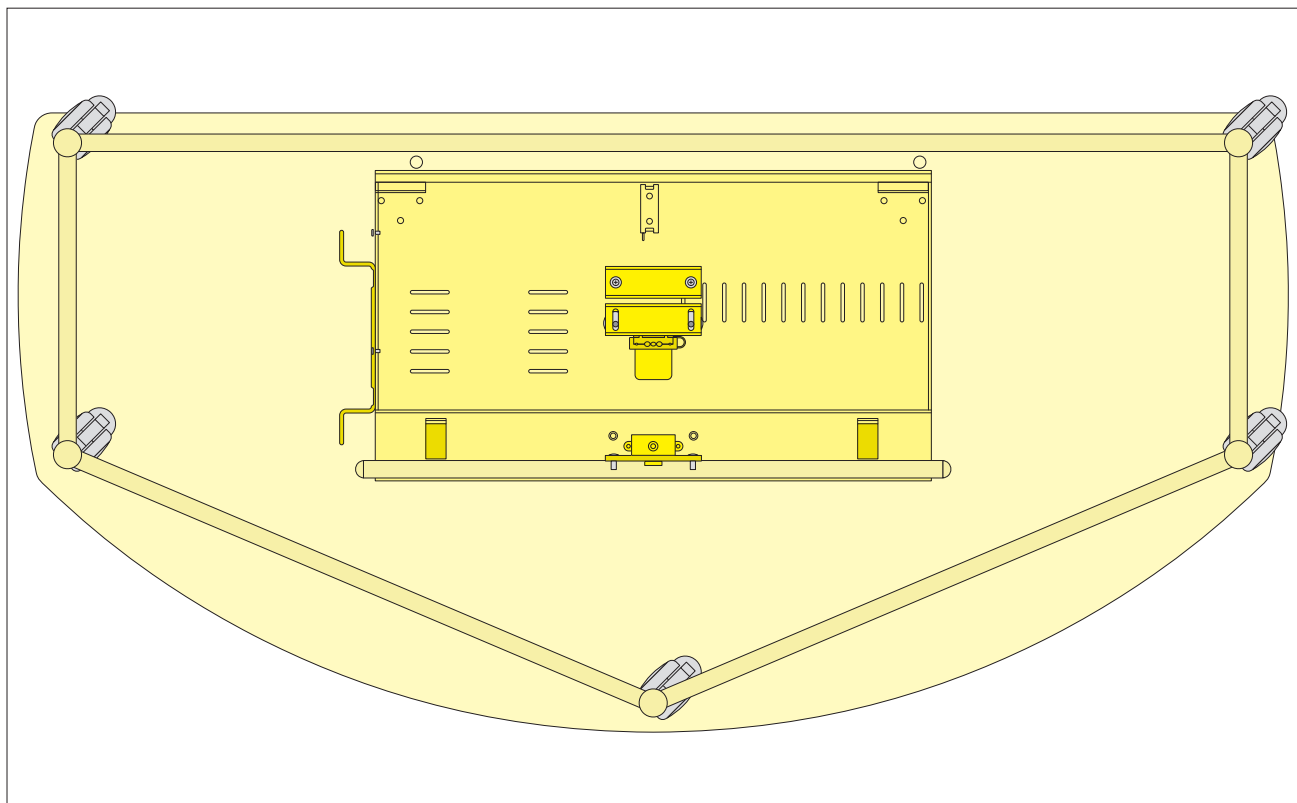

4. Opening the cable tray:

To open the folding cable tray (1), first unlock the lock (2) using the key provided. Then unlock the two locking bars (3).

Caution! Carefully fold the cable tray downwards until it is held in position by the retainer (4).

5. Power supply:

Secure the supplied socket strip in the elongated (5) provided for this purpose using cable ties (not included in the scope of delivery).

Caution! Power cables should generally be secured using a strain relief mechanism (7) and be released on removal. Excess cable lengths should be wound around the clip (6).

6. Cable passage:

Cables that pass through the front cable (8) in the table top must be secured by adjusting the opening of the passage. To do this, release the adjusting screws (9) and push and adjust the cable clamp (10) until the size of the opening matches the cable cross-section. Then tighten the screws again.

Caution! Do not squeeze or crush the cable.

7. Closing the cable tray:

Push the cable tray up until the locking bars audibly engage and then lock it again.

