




http://links.vs-service.com/downloads/70-365_V05_DEEN_PARETO_Hoehenverstellung.pdf

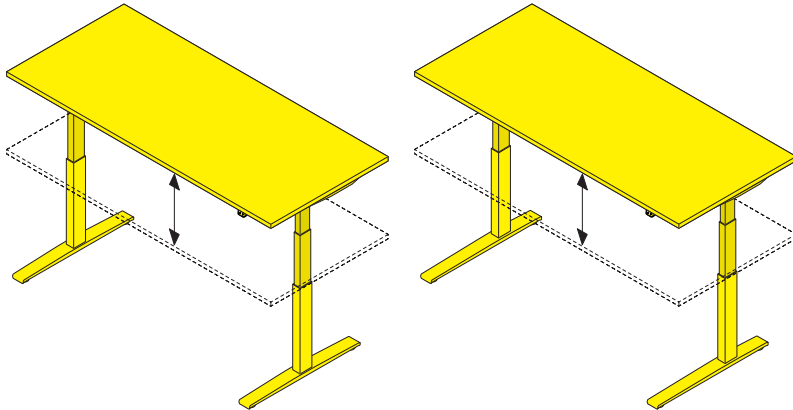

Bedienungsanleitung

Pareto
Höhenverstellbarer
Sitz-/Stearbeitsplatz.
C-Fuß, T-Fuß.

Bitte sorgfältig aufbewahren!

Operating Instructions

Pareto
Height-adjustable
seated/standing workplace.
C-foot, T-foot.

*Please keep these Instructions
carefully!*

Content

1. General comments	38
1.1 Importance of the Operating Instructions	38
1.2 Intended use (scope)	39
1.3 Incorrect use	40
1.4 Scope of delivery, assembly, transport, storage	40
1.5 Transfer / disposal	41
2. Safety notes	42
3. Collision protection	44
3.1 Information on collision protection	44
3.2 Notes on use	44
4. Using the desk handswitch (DPA / DPG)	45
4.1 Using the desk handswitch (DPA)	45
4.2 Functions	46
4.3 Using the desk handswitch (DPG)	47
4.4 Adjusting the height	47
4.5 Saved positions	48
4.7 Bluetooth® connection	51
4.8 Reminders / setting the reminder interval	51
4.9 Container and shelf stop	53
5. Troubleshooting	54
5.1 The desk does not move	54
5.2 Reset travel (initialization)	54
5.3 Fault codes	56
5.4 Troubleshooting customer / VS Customer Service	57

6. <i>Using the cable tray</i>	59
7. <i>Twin dual desk</i>	60
8. <i>Technical data</i>	61
9. <i>Notes on ergonomic use</i>	64
10. <i>EU-Konformitätserklärung</i>	66

General safety instructions

The following symbols and notes are used in our Instructions:



Important!

This symbol indicates an important assembly note.



Caution!

This symbol indicates a very important note.

Safety instructions



Caution! Please read these instructions carefully before starting to use the system and keep them in a safe place for future reference. They are also available via download: (see title in header).



Caution!

Children must not play with the equipment.



Caution! Rodents should be kept away from electrical operating equipment and their power supply lines. Damaged lines may pose a risk to humans and animals.



Caution! It is essential to follow the safety instructions! Incorrect operation of the system may cause risks to persons and property!

 **Important!** Office furniture containing electrical installations must be inspected in accordance with the accident prevention regulations and generally acknowledged rules of sound practice, and the specified inspection intervals must be adhered to!

 **Caution!** When using the drive, make sure that no objects (e.g. items of furniture) or body parts are trapped! When operating the desk, the user must always make sure that no other persons are present at the desk and that the travel path is free from obstacles. A minimum distance of 25 mm from nearby objects must be maintained in order to avoid the possibility of trapping and shearing!

 **Caution!** Before taking the system into operation, make sure that the operating voltage of the system corresponds to the local power supply. The system is in operation as soon as it is connected to the power supply.

 **Caution!** The collision protection is not an entrapment or personal protection mechanism! For physical reasons, "soft" obstacles may only be poorly detected and evaluated or may not be detected at all! If the desk travels against an obstacle then it is possible that the obstacle may suffer damage because the desk travels against it at its nominal speed!

 **Caution!** Before using the desk for the first time or in the event of a malfunction, a manual reset (initialization) must be performed.



Caution! *If the button is released before the operation has been completed then initialization will be interrupted and has to be repeated. If initialization is interrupted then the system cannot travel upwards.*



Caution! *If the desk travels against an obstacle then it is possible that the obstacle may be damaged because the desk travels against it at its nominal speed!*



Caution! *During the warranty period, the drive elements may only be replaced by the VS Customer Service (VS-KD).*



Important! *If you have any further questions, please consult your responsible expert VS consultant or the appropriate VS branch.*



Caution! *When using the drive, make sure that no objects or body parts are trapped!*

1. General comments



Caution! *Please read these instructions carefully before starting to use the system and keep them in a safe place for future reference. They are also available via download: (see title in header).*

1.1 Importance of the Operating Instructions

- Knowledge of the basic notes on safety and the safety instructions is vital in order to ensure the safe handling and fault-free operation of this seated/standing workplace.

-
- *These Operating Instructions contain the most important information to ensure the safe use of the seated/standing workplace.*
 - *Anyone who works at the seated/standing workplace (e.g. maintenance personnel, operators, technical managers, electricians) must be familiar with these Operating Instructions, and in particular the notes on safety.*
 - *In addition, the rules and regulations on accident prevention that apply at the place of use must be adhered to.*
 - *All the information in these Instructions is valid at the time of printing. Product technology or design may be subject to change in order to bring about improvements to the product.*

1.2 Intended use (scope)

The current seated/standing workplace is an office work desk/screen workstation that has been designed exclusively for seated and standing office activities and is therefore intended for this use only. Any other use or use beyond the intended scope (e.g. in workshops, storage areas, explosive areas, damp locations) is considered to be non-intended use. The company VS Vereinigte Spezialmöbelfabriken GmbH & Co. KG accepts no responsibility for any loss or damage resulting from such use.

 **Caution!** *The seated/standing workplace may only be used in private premises if fitted with a special locking mechanism (see section 4.6). It is essential that this locking mechanism is activated to prevent unauthorized use!aktivieren!*

1.3 Incorrect use

- This equipment can be used by children as of 8 years of age as well as by persons with reduced physical, sensory or mental capabilities or who lack the relevant experience and knowledge provided that they are supervised or have been instructed in the safe use of the equipment and understand the risks involved. Cleaning operations must not be performed by children unless they are supervised.
- Never use the seated/standing workplace to lift persons or loads.
- Only load the seated/standing workplace up to the maximum load permitted across the full surface of the desk (see section 7 Technical Data).



Caution!

Children must not play with the equipment.




Caution! Rodents should be kept away from electrical operating equipment and their power supply lines. Damaged lines may pose a risk to humans and animals.

1.4 Scope of delivery, assembly, transport, storage

- VS Vereinigte Spezialmöbelfabriken GmbH & CoKG delivers the seated/standing workplace fully assembled.
- During the warranty period, repairs may only be performed by employees of VS Vereinigte Spezialmöbelfabriken GmbH & CoKG.
- The assembly of subsequently supplied accessories and/or conversion operations made necessary by them may only be performed by persons who are perfectly familiar with the assembly

instructions. Only original VS accessories may be used.

- If you have to move the seated/standing workplace, make sure that the plug has been disconnected from the mains and that there are no objects on the desk.
- Only carry the seated/standing workplace by its frame or use a trolley (furniture trolley).
- The seated/standing workplace may only be moved by two persons working together and it must be in its retracted state. Under no circumstances should you pull or tilt the seated/standing workplace. After moving the desk, you must always perform a manual reset (initialization) (see section 4.0).
- If desks are stored, a maximum of one desk may be stacked on another. Avoid damage when doing this. When stacked, the desk must be in its lowest position. Only store desks in their normal working position **[Figure 1]**.

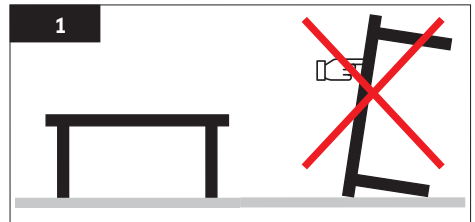

1.5 Transfer / disposal

- If the product is transferred to another party then it must be accompanied by these Instructions. Please contact your responsible local authority department regarding environmentally friendly disposal.
- The indicated electric and electronic components must not be disposed of with the ordinary waste. They must be removed from the furniture unit before the unit is sent for disposal. It must be disposed of at authorized collection and return points.



2. Safety notes



Caution! *It is essential to follow the safety instructions! Incorrect operation of the system may cause risks to persons and property!*

- *Never open the housing of the controller or of the switching power supply! Unauthorized opening of the housing and incorrect repairs may cause risks for users and will render the warranty null and void. The electrical equipment may only be opened and repaired by the VS Customer Service! In the case of malfunctions such as the emission of smoke or odours or in the event of unusual noises or visible external damage, do not continue to use the equipment. Disconnect the power plug from the mains and inform the VS Customer Service (Tel.: +49 (0)9341/880)!*
- *The mains connection line to the mains socket must be located close to the desk and must be easily accessible.*
- *Electrical supply lines must not be exposed to any risk of crushing or any strain due to bending or pulling! You must also make sure that the cables are long enough to accommodate the up-and-down movement of the desk.*
- *When establishing electrical connections at office furniture, observe the applicable guidelines: Electrical connections may only be established by specialist personnel!*



Important! *Office furniture containing electrical installations must be inspected in accordance with the accident prevention regulations and generally acknowledged rules of sound practice, and the specified inspection intervals must be adhered to!*

-
- *Protect electrical components against moisture and dripping or splashed water.*
 - *The switching power supply / controller and desk handswitch may only be cleaned using a dry or slightly moistened cloth.*

 **Caution!** *When using the drive, make sure that no objects (e.g. items of furniture) or body parts are trapped! When operating the desk, the user must always make sure that no other persons are present at the desk and that the travel path is free from obstacles. A minimum distance of 25mm from nearby objects must be maintained in order to avoid the risk of trapping and shearing!*

- *The desk may only be operated with the supplied/installed controller and power supply unit!*
- *To protect against overvoltages, for example due to storms, it is advisable to install surge protection. Please seek the advice of an electrical fitter.*
- *Observe the specifications regarding operating times, temperature etc. (see section 7).*

 **Caution!** *Before taking the system into operation, make sure that the operating voltage of the system corresponds to the local power supply. The system is in operation as soon as it is connected to the power supply.*

- *Cleaning operations must not be performed by children unless they are supervised.*
- *If the equipment's mains power line is damaged, it must be replaced by the manufacturer, the manufacturer's customer*

service department or a similarly qualified person in order to avoid any risks.

The warranty applies only if the product is used as intended. The product is maintenance-free.

3. Collision protection



Caution! *The collision protection is not an entrapment or personal protection mechanism! For physical reasons, "soft" obstacles may only be poorly detected and evaluated or may not be detected at all! If the desk travels against an obstacle then it is possible that the obstacle may suffer damage because the desk travels against it at its nominal speed!*

3.1 Information on collision protection


- *If the desk meets and detects an obstacle when traveling either upwards or downwards then the collision protection prevents the desk from being tilted or continuing its travel. If an obstacle is detected then the desk stops moving and reverse travel is initiated (difference in reverse travel: approx. 5cm).*

3.2 Notes on use

- *Start/acceleration phase: Once travel has started, obstacles can only be detected after travel of approximately 2 cm, after the nominal speed has been reached.*
- *Load: If the desk is not subject to any load then obstacles cannot be or can only be poorly detected.*
- *Soft obstacles: Soft obstacles include all types of obstacle that*

initially give way when the desk travels against them, for example as in the case of human body parts, upholstered chairs etc. Soft obstacles cannot be or can only be poorly detected.

- Operating time restriction: The electronics monitor how long the drives have been operating. If the maximum permitted time is exceeded then the electronics do not permit continued operation of the drives (see section 7).

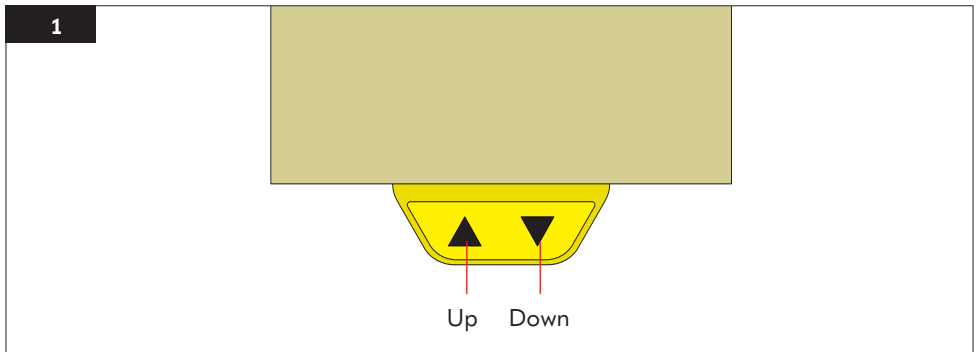

4. Using the desk handswitch (DPA / DPG)

4.1 Using the desk handswitch (DPA)

Height adjustment

Press the ▲ button to move the desk upwards. Press the button ▼ to move the desk downwards. The drives continue to run for as long as you hold the button down.


4.2 Functions

- Operating time restriction

The electronics monitor heating in the drive mechanism. If the temperature values are exceeded then the travel speed is reduced correspondingly.



Caution! *If the desk travels against an obstacle then it is possible that the obstacle may be damaged because the desk travels against it at its nominal speed!*

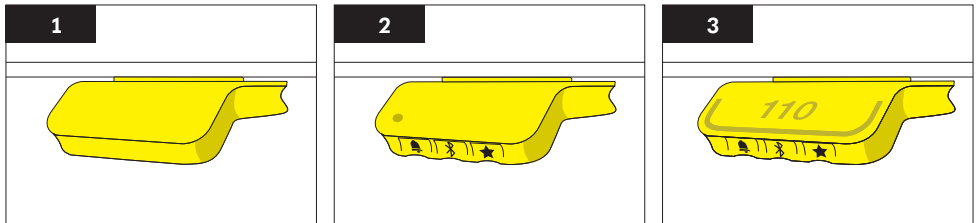

Standard handswitch

[Figure 1]

- Up/down function

Memory handswitch

[Figure 2]

- Up/down function
- 2 saved positions
- Reminder function via LED
- Bluetooth®

Memory-display handswitch

[Figure 3]

- Up/down function
- 4 saved positions
- Reminder function via light strip
- Bluetooth®
- Display


4.3 Using the desk handswitch (DPG)

4.4 Adjusting the height


Three different handswitches with different functions are used to adjust the heights of the desks:

Height adjustment

Press the handswitch **(1)** upwards to move the desk upwards. Press the handswitch **(1)** down-wards to move the desk downwards. The drives continue to run for as long as you hold the hands-witch **(1)** down. In the case of the memory-display handswitch, the current height of the desk is displayed in cm in the display.

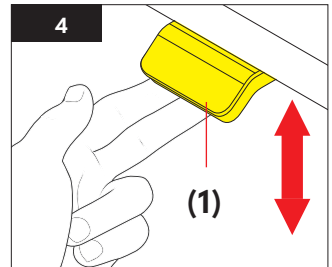

- **Soft start / soft stop:** The drives are operated at reduced power for a short time after starting or before stopping.

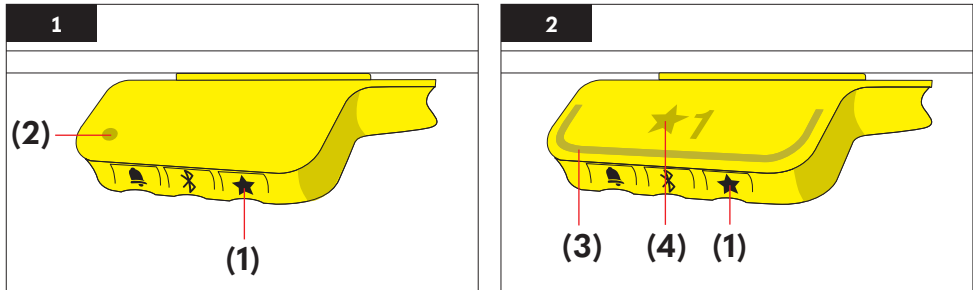

4.5 Saved positions

- **Memory handswitch and memory-display handswitch:**

Saving positions 1 and 2

On the right-hand side of the handswitches **[Figure 1]**, there is a "Save" button **(1)** which is indicated by a star icon ★

- Move the desk to a position that suits you and press and hold down the star button **(1)** for two seconds. The LED **(2)** on the memory handswitch or the light strip **(3)** on the memory-display handswitch **[Figure 2]** flashes twice to show that the memory process is active.
- Memory-display handswitch only **[Figure 2]**: The display shows the saved position with a star and the position number. The number next to the star corresponds to the sequence in which the positions were saved. First saved position: A star with a "1" next to it **(4)**. The positions "1" and "2" are saved in this way.
- If the user moves the desk to another position and then saves this, this overwrites the saved position nearest to the current position.

- **Additional function of the memory-display handswitch**
[Figure 2]: Saving positions 3 and 4

The handswitch has four storage positions. If you press the star button **(1)** briefly, the display shows one of the four saved positions. By repeatedly pressing the star button **(1)** briefly, you can switch between these four saved positions and choose the number under which the current position is to be saved. For example, you might want to save the current position as position 3: Keep pressing the star button until "3" is shown next to the star in the display. Now perform the same save operation as described above: Press the star button for two seconds to save the position.

- **Moving to saved positions**

After you have saved the memory positions, you can move to them easily by pressing and holding the handswitch. When a saved position is reached, the desk stops automatically. This allows users to switch between standing and sitting without having to look at the handswitch.

- When the desk stops at a saved position, the user can press the handswitch for one second and the desk moves away from the saved position in the direction in which the switch was pressed. Alternatively, the user can also release the handswitch and then press it again to move past the saved position.

- **Clearing saved positions**


Press the star button for eight seconds to clear all the saved positions. The LED or light strip flashes red when the operation is completed.

4.6 Button lock/safety mechanism in private premises

The handswitch (VS part no. 88-668) must be secured using a locking function when the desk is used in private premises. If this function is not present, please contact the VS Customer Service (Tel. +49 (0)9341/880)!




Caution! If the handswitch is locked, a padlock lights up in the display. The light turns red for one second.

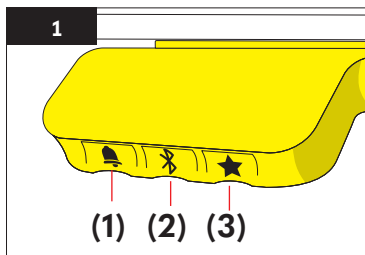

To unlock the control element **[Figure 1]**, press the buttons bell **(1)** - Bluetooth **(2)** -star **(3)** immediately after one another (max. 1 second interval). When the handswitch is unlocked, the height is shown in the display. The handswitch is now activated. You can now press the handswitch to adjust the desk as required.

The handswitch then remains activated for a further 5 seconds. If no button is pressed again during this time then the handswitch is locked again.

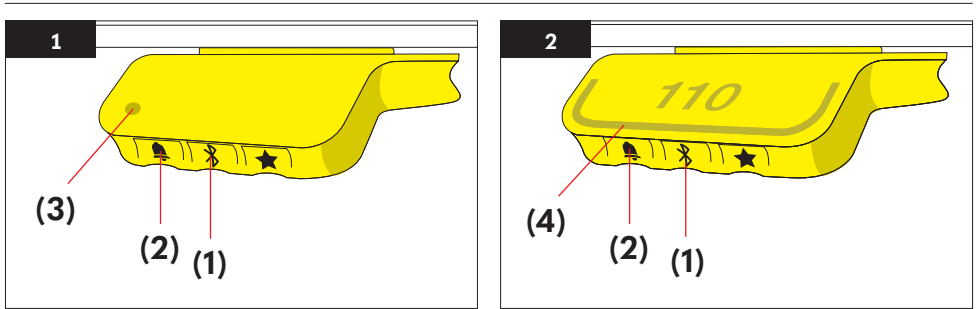

4.7 Bluetooth® connection

Memory and memory-display handswitches **[Figure 1-2]**

Download the Desk Control App applicable to your unit from the App Store or Google Play and connect the app to your unit: Press the centre of the Bluetooth® button **(1)** for 2 seconds to activate connection mode. A flashing blue light in the LED **(3)** or light strip **(4)** shows that connection mode is active.

On the memory-display handswitch, the display indicates the desk's Bluetooth ID. This consists of "DESK" followed by a four-digit number – search for this ID in the list of nearby desks.

4.8 Reminders / setting the reminder interval

Memory and memory-display handswitches **[Figure 1-2]:**

On the left-hand side of the handswitches, there is a "reminder button" **(2)** which is indicated by a bell icon. You can press this button to set an interval after which you want to be reminded to change your position.

On the memory handswitch, the LED **(3)** glows in three different intensities, each of which indicates an interval. On the memory-display handswitch, each white block in the light strip **(4)** represents an interval.

The three intervals are:

- Interval 1: Reminder after sitting for 55 minutes
- Interval 2: Reminder after sitting for 50 minutes
- Interval 3: Reminder after sitting for 45 minutes

The selected standard interval issues a reminder after 55 minutes, meaning that the LED glows with the weakest intensity or only one bar on the light strip glows in white. You can easily switch between the intervals by pressing the “bell” button. If the LED or light strip does not glow then the reminder function is deactivated.

You can use the Desk Control App to customize the three intervals with your own user-defined values.

- **Reset reminder**

Pressing the “bell” symbol for eight seconds resets the reminder function to the default values. Depending on the model, the LED glows red or the display shows a countdown and the strip flashes to show when the operation is completed.

- **LED reminder**

The status of the desk user is indicated by the LED in the bottom left corner or by the light strip.

The status depends on the selected reminder interval. If the user changes position within a reasonable period in accordance with the interval then the LED or light strip slowly flashes green. If the sitting interval expires then the slow green flashing signal changes to a fast flashing green for a minute and then to a permanent orange – this is an indication to the user that it is time to move the desk upwards and stand up.

When the desk is at standing height, the LED or light strip flashes green until the user has a possible break. If the desk is moved back down to the sitting position again, the LED flashes green until the reminder function becomes deactivated again. After four hours without any action, the LED or light strip switches off. When the handswitch is pressed, the green light comes on again.

Please note: If the LED for the reminder function is activated then the handswitch is no longer in standby mode as long as the light is switched on/active.

4.9 Container and shelf stop

Up-Down with memory and Up-Down with memory and display

These two functions can be used to limit the desk's travel range (for example, if there is a container under the desk). A container stop position can be set in the bottom half of the travel range and a shelf stop position in the top half. If a container stop position is set then this acts as the new lower end position. A shelf stop position acts as a new upper end position for the travel range. Proceed as follows to save a container/shelf stop position:

- *Move the desk to a position of your choice by pressing the up or down control.*
- *To set a container stop position, hold down the Bluetooth® button for 8 seconds and simultaneously press the handswitch downwards.*
- *To set a shelf stop position, hold down the Bluetooth® button for 8 seconds and simultaneously press the handswitch upwards.*
- *The LED lights up in white twice to confirm.*

- To clear the stop positions, hold the star and bell buttons down for 8 seconds.

5. Troubleshooting

5.1 The desk does not move

- Check whether the maximum operating time has been exceeded (see section 7) and the operating time restriction has been activated.
- Check whether all the cables are inserted correctly (and if necessary whether there is a functioning electricity supply).
- Make sure that the load (see section 7) on the desk is not too high.
- Make sure that no obstacles are blocking the travel path.

5.2 Reset travel (initialization)



Caution! In the event of a malfunction, a manual reset (initialization) must be performed.

The reset position is reached at a desk height of $\leq 650\text{mm}/\leq 680\text{mm}$. When operating the desk, the user must always make sure that the travel path is free from obstacles (in particular below the desk). The system is initialized by pressing the handswitch downwards and holding it in this position. It must be held down until the drives reach the lower stop position. As soon as the drives reach the bottommost stop position, it is necessary to release the handswitch for 2-3 seconds and then press and hold it down for a further 5 seconds. Initialization is now complete. The system is lowered by 5 mm and

then raised again during initialization. Under no circumstances should you release the handswitch during initialization.



Caution! If the handswitch is released before the operation has been completed then initialization will be interrupted and has to be repeated. If initialization is interrupted then the system cannot travel upwards.



Caution! If the handswitch is locked, a padlock lights up in the display and the light is red for one second. For information on unlocking the handswitch, please see section 4.4.

If a safety stop has been set then it is important to note that the system must travel to the lower stop position before initialization can be started. To override the set safety stop, it is necessary to press the handswitch down a second time after the preliminary stop is reached to cause the system to travel to the lower end stop with approximately half its drive speed.

After a successful reset, the system travels the first two times to the topmost position and then approximately 3mm back again.

5.3 Fault codes

A fault number is shown at the display

<i>Fault code</i>	<i>Meaning</i>	<i>Remedy / description</i>
<i>E-01</i>	<i>Loss of position</i>	<i>Perform a reset</i>
<i>E-16</i>	<i>Button error</i>	<i>Incorrect combination of buttons pressed on hand-switch, button combination is not supported</i>
<i>E-59</i>	<i>Collision protection Channel 1</i>	<i>The desk's collision protection has been triggered Check travel path, Remove obstacles</i>
<i>E-60</i>	<i>Collision protection Channel 2</i>	<i>The desk's collision protection has been triggered Check travel path, Remove obstacles</i>



Caution! During the warranty period, the drive elements may only be replaced by the VS Customer Service (VS-KD).



Important! If you have any further questions, please consult your responsible expert VS consultant or the appropriate VS branch.

5.4 Troubleshooting customer / VS Customer Service




Caution! The drive elements may only be replaced by the VS Customer Service (VS-KD)!

When contacting the VS Customer Service, please have the model number and serial number of the desk ready. You can find these on a nameplate located on the underside of the desk top **[Figure 4]**.



Fault	Description of fault	Troubleshooting
Drives do not function	Controller not connected	Plug in power cord
	Drive not connected	Plug in motor cable
	Bad plug-in contact	Plug in desk handswitch, mains or motor connector correctly
	Drive faulty	Please contact the Customer Service
	Controller faulty	Please contact the Customer Service
	Desk handswitch faulty	Replace the desk handswitch
Drive runs in only one direction	Controller faulty	Please contact the Customer Service
	Desk handswitch faulty	Replace the desk handswitch
Controller or desk handswitch does not work	Controller not connected	Plug in power cord
	Desk handswitch not connected	Plug in desk handswitch
	Controller faulty	Please contact the Customer Service
	Faulty power cord	Please contact the Customer Service
	Desk handswitch faulty	Replace the desk handswitch
	Bad plug-in contact	Plug in connector correctly

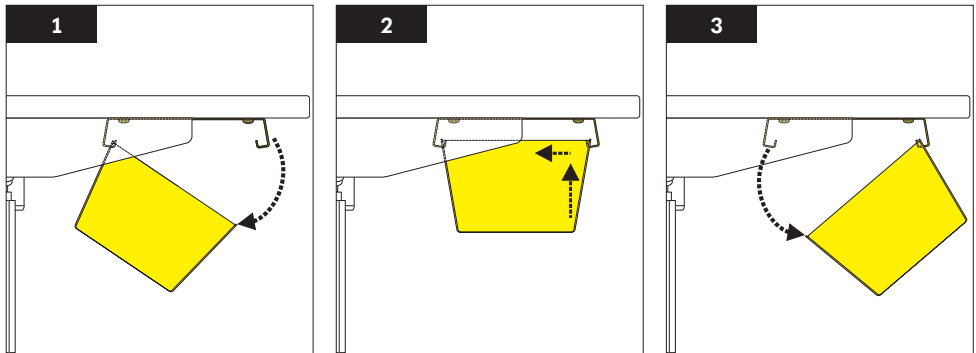


6. Using the cable tray

The cable tray can be released toward the user's side of the desk and towards the back of the desk **[Figure 1], [Figure 2], [Figure 3]**.

The following steps must be performed to release the cable tray at the required side. Lift the cable tray slightly at the side facing you and then move the cable tray forwards a little. You can now open the cable tray downwards.

To insert the cable tray again, perform the above steps in the reverse sequence.

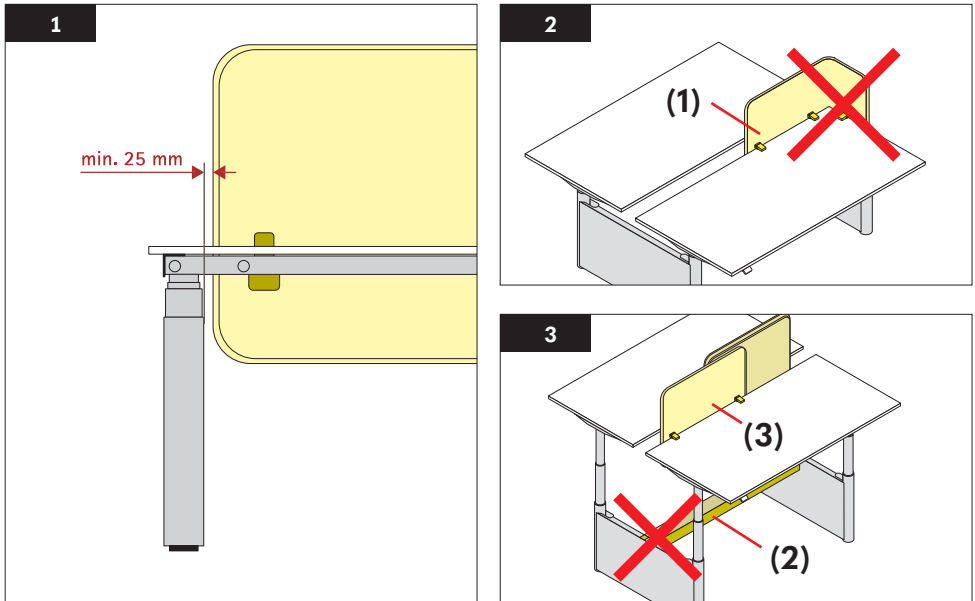

7. Twin dual desk


The following should be noted in the case of the Twin dual desk with moving screens

- **Screens** that move **straight** must be moved in at the left and right in the area of the end panel in order to prevent pinching between the end panel and the screen. Safety distances of 25mm must be respected **[Figure 1]**.
- A moving ScreenPlus **corner screen (1)** is not permitted **[Figure 2]!**
- A **hollow tray (2)** is not permitted in combination with moving screens **(3) [Figure 3]!**



Caution! When using the drive, make sure that no objects or body parts are trapped!

8. Technical data

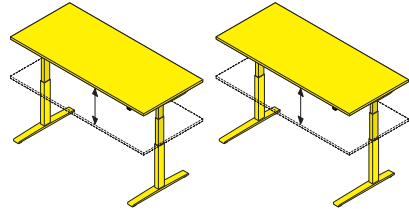

Name

C-type/T-type foot Pareto

The height depends on the
choice of variant:

from 65 to 125 cm

Maximum lifting load at

75 kg (full surface area)

Operating time

2 minutes "ON" and
18 minutes "OFF"

Safety shut-off

Ambient temperature
for operation

must not be below +0°C
and must not exceed + 35 °C

Sound emissions

< 50 dB(A)

Travel speed

38 ± 2 mm/sek

Relative humidity

5 bis 85 %

Power supply

100 - 240 V

Current consumption

max. 1,6 A

Protection type, IP class

IPX0

Protection class


II

Frequency range

50/60 Hz

Standby power, primary (typical)

0.1 W

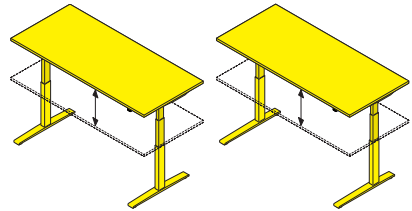

Name

C-type/T-type foot controller piezo sensor

The height depends on the
choice of variant:

from 65 to 125 cm

Maximum lifting load at

75 kg (full surface area)

Operating time

2 minutes "ON" and
18 minutes "OFF"
Safety shut-off

Ambient temperature
for operation

must not be below +0°C
and must not exceed + 35 °C

Sound emissions

< 50 dB(A)

Travel speed

38 ± 2 mm/sec

Relative humidity

5 to 85 %

Power supply

230 V

Power consumption

300 W when operating
with a load

Protection type, IP class

IPX0

Protection class


II

Frequency range

50 Hz

Standby power, primary (typical)

0.1 W

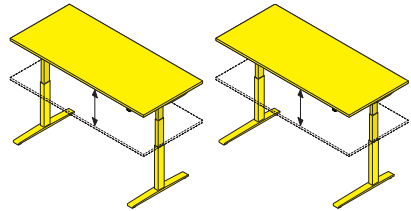

Name

C-type/T-type foot“ single telescoping”

The height depends on the
choice of variant:

von 68 bis 118 cm

Maximum lifting load at

75 kg (vollflächig)

Operating time

2 minutes “ON” and
18 minutes “OFF”
Safety shut-off

Ambient temperature
for operation

must not be below +0°C
and must not exceed + 35°C

Sound emissions

< 50 dB(A)

Travel speed

38 ± 2 mm/sec

Relative humidity

5 to 85 %

Power supply

100 - 240 V

Current consumption

max. 1.6 A

Protection type, IP class

IPX0

Protection class

II


Frequency range

50/60 Hz

Standby power, primary (typical)

0.1 W

1

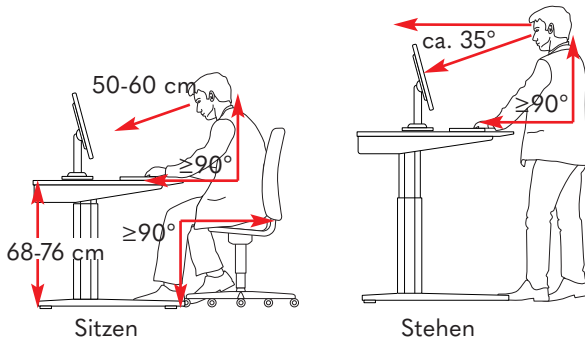

9. Notes on ergonomic use

- Seated/standing workplaces allow you to organize your work in a particularly flexible way. Thanks to the possibility of adjusting the height of the entire working area together with the screen and input devices, it is possible to perform practically any activity either seated or standing.
- **Recommendations:**
 - A.** It is better to stand up frequently for short periods than to remain standing for a long time.
 - B.** You should avoid standing with a static posture.
 - C.** 2 to 4 changes of posture per hour are advised **[Figure 1]**.
- The screen should be positioned in such a way that there are no reflections on it due, for example, to the lighting or windows. The best solution is to position the screen in such a way that it is located between two lighting strips and you are looking at it parallel to a window. The top line on the screen should not be above the horizontal visual axis. To permit a comfortable head position, you should look downwards at the centre of the screen at an angle of approximately 35° **[Figure 1]**.

- *The height adjustment mechanism also makes it easy to adjust the correct seating height. If possible, only sit on furniture that is ergonomically shaped and is height-adjustable. The backrest should be shaped in such a way that the lumbar vertebrae are optimally supported. Observe the manufacturer's instructions about how to adjust the chair exactly to your body size and shape.*
- *The Council of the European Community has introduced various directives and regulations for workplace ergonomics and these are subject to EC Directive 90/270/EEC.*
- *A guideline on the design of screen and office workplaces has been issued by the Verwaltungs-Berufsgenossenschaft in its series of publications on accident prevention (German Social Accident Insurance regulation 215-410).*

*For more detailed information, go to **www.vbg.de***

10. EU-Konformitätserklärung

Firma: VS Vereinigte Spezialmöbelfabriken GmbH & Co. KG
 Hochhäuser Straße 8
 D-97941 Tauberbischofsheim

Typologie: Sitz- Steharbeitsplatz
Benennung: Sitz- Steharbeitsplatz-Serie Pareto
Modell-Nr.: Modell 21731 / 21751 / 22531 / 22551 Tisch 120x80 cm
 Modell 21732 / 21752 / 22532 / 22552 Tisch 140x80 cm
 Modell 21733 / 21753 / 22533 / 22553 Tisch 160x80 cm
 Modell 21734 / 21754 / 22534 / 22554 Tisch 180x80 cm
 Modell 21735 / 21755 / 22535 / 22555 Tisch 200x80 cm
 Modell 21741 / 21761 / 22541 / 22561 Tisch 120x90 cm
 Modell 21742 / 21762 / 22542 / 22562 Tisch 140x90 cm
 Modell 21743 / 21763 / 22543 / 22563 Tisch 160x90 cm
 Modell 21744 / 21764 / 22544 / 22564 Tisch 180x90 cm
 Modell 21745 / 21765 / 22545 / 22565 Tisch 200x90 cm
 Modell 21758 Doppeltisch 2x 160x80 cm
 Modell 21759 Doppeltisch 2x 180x90 cm
 Modell 21768 Doppeltisch 2x 160x90 cm
 Modell 21769 Doppeltisch 2x 180x90 cm

Ausführung: C-Fuß / T-Fuß
Sonderausstattung: - / -

Hiermit wird bestätigt, dass das oben bezeichnete Produkt den Bestimmungen folgender EU-Richtlinien entspricht.

Maschinenrichtlinie	2006/42/EG
Ggf. andere einschlägige EU-Richtlinien:	
EMV-Richtlinie	2014/30/EU
RoHS Richtlinie	2011/65/EU

Hinsichtlich der elektrischen Gefahren wurden gemäß Anhang I Nr. 1.5.1 der Maschinenrichtlinie 2006/42/EG die Schutzziele der Niederspannungsrichtlinie 2014/35/EU eingehalten.

Die Bluetooth-Handschalter unterliegen darüber hinaus der RED-Richtlinie 2014/53/EU.



*Das Produkt darf nicht über den Hausmüll entsorgt werden.
 Die Entsorgung erfolgt an zugelassenen Sammel- und
 Rücknahmestellen.*

Tauberbischofsheim, den 03.06.2019

[Signature]
 Unterschrift
 Heller, Jens
 Name, Vorname

Jens Heller
 CE-Dokumentations-Bevollmächtigter

Funktion: Bereichsleitung
 Produktentwicklung und Serienkonstruktion

VS Vereinigte Spezialmöbelfabriken GmbH & Co. KG
 Sitz: Tauberbischofsheim
 Registergericht: Amtsgericht Mannheim HRA 560116
 USt-Id.Nr.: DE 146587381
 Internet: <http://www.vs-moebel.de>
 (KONFORMITÄTSERKLÄRUNG_Pareto.doc)

Geschäftsführer:
 Philipp Müller, Prof. Dr. Ing. Thomas Müller, Bernhard Schwing
 Komplementär:
 VS Vereinigte Spezialmöbelfabriken Verwaltungs-GmbH
 Sitz: Tauberbischofsheim
 Registergericht: Amtsgericht Mannheim HRB 560029

Bankverbindungen:
 Sparkasse Tauberfranken BLZ 673 635 65 Kto. 2 000 926
 Landeskass Baden-Württemberg BLZ 600 501 01 Kto. 2 050 302
 Volksbank Main-Tauber eG BLZ 673 900 00 Kto. 70 321 807
 Deutsche Bank Würzburg BLZ 790 700 16 Kto. 22 623 300
 Dresdner Bank Würzburg BLZ 790 800 52 Kto. 323 530 000