




http://links.vs-service.com/downloads/70-409_V03_DEEN_S902-Hoehenverstellung.pdf

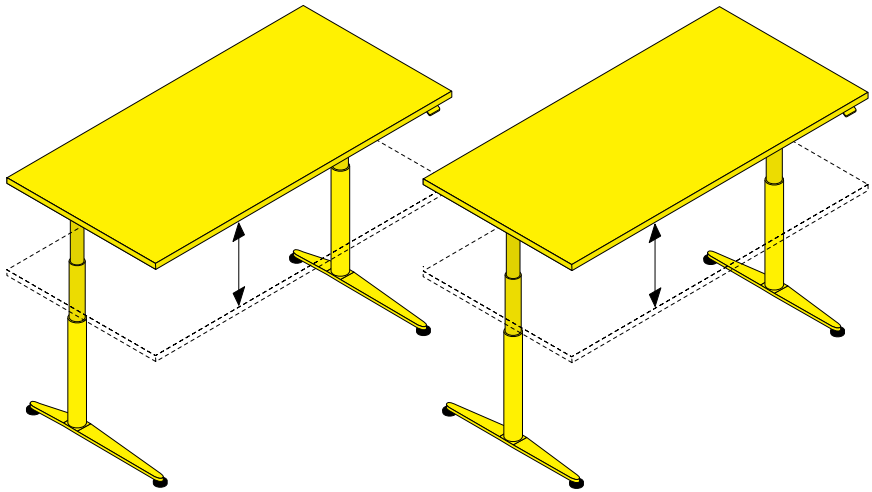

Bedienungsanleitung

S902 Höhenverstellbarer Sitz-/ Steharbeitsplatz C-Fuß, T-Fuß

Bitte sorgfältig aufbewahren!

Operating Instructions

S902 Height-Adjustable Seated/Standing Workstation C-foot, T-foot.

*Please keep these instructions
carefully!*

Content

General safety instructions:	46
Safety notes:	46
1. General comments:	50
1.1 Importance of the Operating Instructions:	50
1.2 Intended use (scope):	50
1.3 Incorrect use:	51
1.4 Scope of delivery, assembly, transport, storage:	52
1.5 Transfer and disposal:	53
2. Safety notes	53
3. Collision protection	55
3.1 Information on collision protection	56
3.2 Notes on use	56
4. Using the table handswitch.	57
4.1 Height adjustment	57
4.2 Settings mode	58
4.3 Height	60
4.4 Units	60
4.5 Favourite positions	61
4.6 Limits	62
4.7 Restore	63
4.8 Button lock/safety mechanism in private premises	63
5. Troubleshooting	64
5.1 The table does not move	64
5.2 Reset travel (initialisation)	65
5.3 Error codes	66
5.4 Troubleshooting customer/VS Customer Services	67
6. Tables with winding handle for height adjustment	69

<i>7. Table management</i>	<i>70</i>
<i>7.1 Moving/removing the table top (only for Pro tables)</i>	<i>70</i>
<i>7.2 Cable trays</i>	<i>72</i>
<i>7.3 Cable chains</i>	<i>72</i>
<i>7.4 CPU holder, ThinClient holder, printer board</i>	<i>76</i>
<i>7.5 Table spacers [Figure 1-2]</i>	<i>78</i>
<i>8. Twin double tables</i>	<i>79</i>
<i>9. Sideboard</i>	<i>80</i>
<i>10. Technical data</i>	<i>82</i>
<i>11. Notes on ergonomic use</i>	<i>83</i>
<i>12. EU Declaration of Conformity</i>	<i>85</i>

General safety instructions:

The following symbols and notes are used in our Instructions



Important!

This symbol indicates an important assembly note.



Caution!

This symbol indicates a very important note

Safety notes:



Caution! Please read these Instructions carefully before starting to use the system and keep them in a safe place for future reference. They are also available via download: (see title in header).



Caution! The seated/standing workstation may only be used in private premises if fitted with a special locking mechanism (see Section 4.8). It is essential that this locking mechanism is activated to prevent unauthorised use!



Caution!

Children must not play with the equipment.



Caution! Rodents should be kept away from electrical operating equipment and their power supply lines. Damaged lines may pose a risk to humans and animals.



Caution! *It is essential to follow the safety instructions! Incorrect operation of the system may cause risks to people and property!*



Important! *Office furniture containing electrical installations must be inspected in accordance with the accident prevention regulations and generally acknowledged rules of sound practice, and the specified inspection intervals must be adhered to!*



Caution! *When using the drive, make sure that no objects (e.g. items of furniture) or body parts are trapped! When operating the table, the user must always make sure that no other people are present at the table and that the travel path is free from obstacles. A minimum distance of 25 mm from nearby objects must be maintained in order to avoid the possibility of trapping and shearing!*



Caution! *Before taking the system into operation, make sure that the operating voltage of the system corresponds to the local power supply. The system is in operation as soon as it is connected to the power supply.*



Caution! *The collision protection is not an entrapment or personal protection mechanism! For physical reasons, "soft" obstacles may only be poorly detected and evaluated or may not be detected at all! If the table travels against an obstacle, then it is possible that the obstacle may suffer damage because the table travels against it at its nominal speed!*



Caution! *If the table travels against an obstacle then it is possible that the obstacle may be damaged because the table travels against it at its nominal speed!*



Caution!

If the handswitch is locked, a padlock lights up in the display.



Caution! *In the event of a malfunction, a manual reset (initialisation) must be performed.*



Caution! *If the handswitch is released before the operation has been completed, then initialisation will be interrupted and has to be repeated. If initialisation is interrupted, the system cannot travel upwards.*



Caution! *If the handswitch is locked, a padlock lights up in the display. Please see No. 4.8 for information on unlocking the handswitch.*



Caution! *During the warranty period, the drive elements may only be replaced by the VS Customer Services (VS-KD).*



Important! *If you have any further questions, please consult your responsible expert VS consultant or the appropriate VS branch.*



Caution! *The replacement of the drive technology is only permitted by VS Customer Services (VS-KD)!*



Caution! After the table height has been adjusted, the manual winding handle must be locked in the park position again.



Caution! When moving/removing the table top, always keep the electrical connection flap open and make sure that there is sufficient cable length.



Caution!

Clear all items from the table top before moving/removing it.



Caution!

Use the strain relief mechanisms for the cable trays.



Important! If necessary, shorten the cable chain for grouped positions to prevent collisions.



Caution! Use the strain relief mechanisms for the cables in the cable tray.



Caution! Table spacers ensure that the necessary safety distance of 25 mm is observed.



Caution! When using the drive, make sure that no objects or body parts are trapped!



Caution! For tables with a round base in particular, make sure that the table is aligned at right angles to the sideboard.

1. General comments:



Caution! Please read these Instructions carefully before starting to use the system and keep them in a safe place for future reference. They are also available via download: (see title in header).

1.1 Importance of the Operating Instructions:

- Knowledge of the basic notes on safety and the safety instructions is vital in order to ensure the safe handling and fault-free operation of this seated/standing workstation.
- These Operating Instructions contain the most important information to ensure the safe use of the seated/standing workstation.
- Anyone who works at the seated/standing workstation (e.g. maintenance personnel, operators, technical managers, electricians) must be familiar with these Operating Instructions, and in particular the notes on safety.
- In addition, the rules and regulations on accident prevention that apply at the place of use must be adhered to.
- All the information in these Instructions is valid at the time of printing. Product technology or design may be subject to change in order to bring about improvements to the product.

1.2 Intended use (scope):

The current seated/standing workstation is an office work table/screen workstation that has been designed exclusively for seated and standing office activities and is therefore intended for this use only. Any other use or use beyond the intended scope (e.g. in

workshops, storage areas, explosive areas, damp locations) is considered to be non-intended use.

VS Vereinigte Spezialmöbelfabriken GmbH&Co.KG accepts no responsibility for any loss or damage resulting from such use.



Caution! The seated/standing workstation may only be used in private premises if fitted with a special locking mechanism (see Section 4.8). It is essential that this locking mechanism is activated to prevent unauthorised use!

1.3 Incorrect use:

- This equipment can be used by children aged from 8 years and above and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the equipment in a safe way and understand the hazards involved. Cleaning shall not be carried out by children without supervision.
- Never use the seated/standing workstation to lift people or loads.
- Only load the seated/standing workstation up to the maximum load permitted across the full surface of the table (see Section 9, "Technical data").



Caution!


Children must not play with the equipment.



Caution! Rodents should be kept away from electrical operating equipment and their power supply lines. Damaged lines may pose a risk to humans and animals.

1.4 Scope of delivery, assembly, transport, storage:

- VS Vereinigte Spezialmöbelfabriken GmbH & Co KG delivers the seated/standing workstation fully assembled.
- During the warranty period, repairs may only be performed by employees of VS Vereinigte Spezialmöbelfabriken GmbH & Co. KG.
- The assembly of subsequently supplied accessories and/or conversion operations made necessary by them may only be performed by persons who are perfectly familiar with the assembly instructions. Only original VS accessories may be used.
- If you have to move the seated/standing workstation, make sure that the plug has been disconnected from the mains and that there are no objects on the table.
- Only carry the seated/standing workstation by its frame or use a trolley (furniture trolley).
- The seated/standing workstation may only be moved by two people working together and it must be in its retracted state. Do not pull or tip the seated/standing workstation under any circumstances.
- After a move, a manual reset (initialisation) is essential (see Section 5.2).
- If the desks are stored, a maximum of one desk may be stacked on another. Avoid damage when doing this. When stacked, the desk must be in its lowest position. Store desks only in their normal working position **[Figure 1]**.

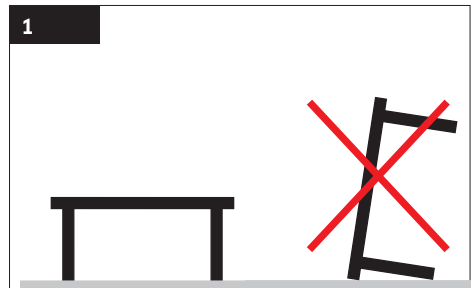

1.5 Transfer and disposal:

- If the product is transferred to another party, then it must be accompanied by these Operating Instructions. Please contact your responsible local authority department regarding environmentally friendly disposal.
- The indicated electric and electronic components must not be disposed of with household waste. They must be removed from the furniture unit before the unit is sent for disposal. They are to be disposed of at authorised collection and return points.



2. Safety notes



Caution! It is essential to follow the safety instructions! Incorrect operation of the system may cause risks to people and property!

- Never open the housing of the controller or of the power pack! Unauthorised opening of the housing and incorrect repairs may cause risks for users and will render the warranty null and void. The electrical equipment may only be opened and repaired by VS Customer Services!
- In the event of malfunctions, such as the emission of smoke or odours, or in the event of unusual noises or visible external damage, do not continue to use the equipment. Remove the plug and inform VS Customer Services (Tel.: 09341/880)!
- The mains connection line to the mains socket must be located close to the table and must be easily accessible.

-
- Electrical supply lines must not be exposed to any risk of crushing or any strain due to bending or pulling! You must also make sure that the cables are long enough to accommodate the up-and-down movement of the table.
 - When establishing electrical connections to office furniture, observe the following guidelines: Electrical connections may only be established by specialist personnel!



Important! Office furniture containing electrical installations must be inspected in accordance with the accident prevention regulations and generally acknowledged rules of sound practice, and the specified inspection intervals must be adhered to!

- Protect electrical components against moisture and dripping or splashed water.
- The controller and table handswitch may only be cleaned using a dry or slightly moistened cloth.



Caution! When using the drive, make sure that no objects (e.g. items of furniture) or body parts are trapped! When operating the table, the user must always make sure that no other people are present at the table and that the travel path is free from obstacles. A minimum distance of 25 mm from nearby objects must be maintained in order to avoid the possibility of trapping and shearing!

- The table may only be operated with the supplied/installed controller and power supply unit!
- To protect against overvoltage, for example due to storms, it is

advisable to install surge protection. Please seek the advice of an electrical fitter.

- *Observe the specifications regarding operating times, temperature etc. (see Section 9).*



Caution! *Before taking the system into operation, make sure that the operating voltage of the system corresponds to the local power supply. The system is in operation as soon as it is connected to the power supply.*

- *Cleaning must not be carried out by children unless they are supervised.*
- *If the equipment's mains power line is damaged, it must be replaced by the manufacturer, the manufacturer's customer services department or a similarly qualified person in order to avoid any risks.*

The warranty applies only if the product is used as intended. The product is maintenance-free.

3. Collision protection



Caution! *The collision protection is not an entrapment or personal protection mechanism! For physical reasons, "soft" obstacles may only be poorly detected and evaluated or may not be detected at all! If the table travels against an obstacle, then it is possible that the obstacle may suffer damage because the table travels against it at its nominal speed!*

3.1 Information on collision protection


- If the table meets and detects an obstacle when travelling either upwards or downwards then the upward travel protection prevents the table from inclining or continuing its travel. If an obstacle is detected, then the table stops moving and reverse travel is initiated automatically (difference in reverse travel: approx. 5 cm)

3.2 Notes on use

- Start/acceleration phase: Once travel has started, obstacles can only be detected after travel of approximately 2 cm, after the nominal speed has been reached.
- Load: If the table is not subject to any load then obstacles cannot be or can only be poorly detected.
- Soft obstacles: Soft obstacles include all types of obstacle that initially give way when the table travels against them, for example as in the case of human body parts, upholstered chairs etc. Soft obstacles cannot be or can only be poorly detected.
- Operating time restriction: The electronics monitor how long the drives have been operating. If the maximum permitted time is exceeded then the electronics do not permit continued operation of the drives (see Section 9).


4. Using the table handswitch.

Three different handswitches with three different functions are used to adjust the table height:

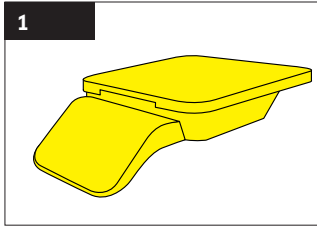


Standard handswitch [Figure 1]

- Up/down function

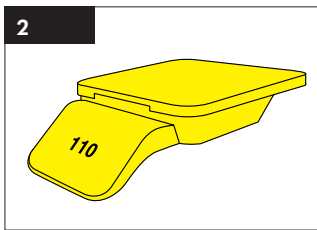

Display-Memory handswitch [Figure 2]

- Up/down function
- 4 saved positions
- Display

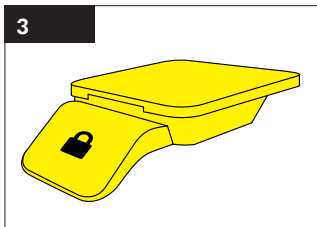


Display-Memory-Lock handswitch [Figure 3]

- Up/down function
- 4 saved positions
- Display
- Activatable button lock (child lock)

4.1 Height adjustment

Tilt the handswitch **(1)** upwards to move the table up. Tilt the handswitch **(1)** downwards to move the table down. The drives continue to run for as long as you hold the handswitch **(1)** in a tilted position. The current height of

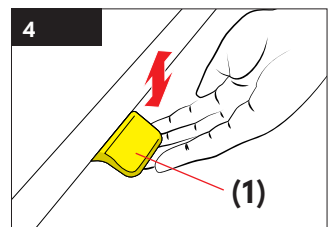

the table is displayed in cm in the handswitch display.

- Soft start/soft stop (only on pro tables): The drives are operated at reduced power for a short time after starting or before stopping.
- Safety range (only on pro tables): For safety reasons, the table controller is equipped with two lower stops (safety range) ex works. In usual travel operation, a first lower stop is travelled to before the bottom position is reached. Only when the handswitch is pressed again does the table travel to its lowest position at reduced speed.




Caution! If the table travels against an obstacle then it is possible that the obstacle may be damaged because the table travels against it at its nominal speed!

4.2 Settings mode


(Only for Display Memory handswitch and Display Memory Lock handswitch)

To access the settings mode, press the connection button **(2)** on the underside of the handswitch while keeping the rocker switch **(1)** flipped down for three seconds.

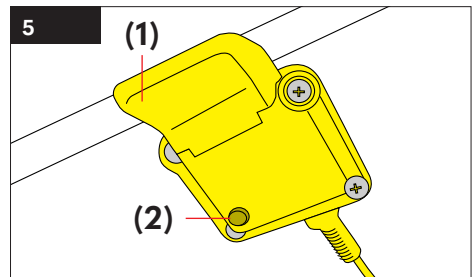

The settings mode is indicated by the symbol **(3)** in the top lefthand corner of the display. In the settings mode, the settings menu is displayed to you with the following items:

- HEIGHT
- UNITS
- FAVOURITE POSITIONS
- RESTORE
- END

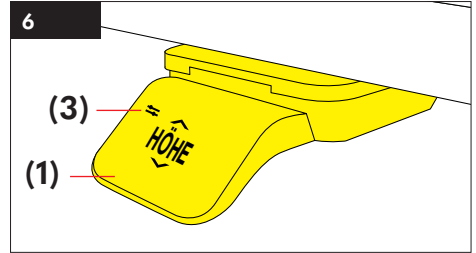

Flip the rocker switch up or down to scroll through the menu items. Press the connection button **(1)** to select an item from the settings menu.

Note: The setup menu is automatically closed after 30 seconds of inactivity.

End settings mode

The bottom menu item is "END". You can leave the settings menu from here when you have made all of your settings. Navigate by flipping the rocker switch until you reach this item in the list and then press the connection button to leave the settings menu.

After 30 seconds of inactivity, the DPI automatically closes the setup menu.

4.3 Height

First of all, proceed as described in Section 4.2 to access the settings mode. Then select the item "HEIGHT" from the settings menu and press the connection button to open the function.

If the height shown in the display is not correct, it can be adjusted using this menu.

- Measure the height from the floor to the table top.
- Flip the rocker switch up or down to set the displayed height.
- Press the connection button to save the new height.

Note: The units can be changed in the "UNITS" menu.

4.4 Units

First of all, proceed as described in Section 4.2 to access the settings mode. Then select the item "UNITS" from the settings menu and press the connection button to open the function.

- Flip the rocker switch up or down to scroll through the options "CM", "MM" and "INCHES".
- Press the connection button to save the selected option.

4.5 Favourite positions

First of all, proceed as described in Section 4.2 to access the settings mode. Then select the item "FAVOURITE POSITIONS" from the settings menu and press the connection button to open the function. You can use this function to set your favourite position.

- Flip the rocker switch up or down to reach the desired favourite position or to delete all set favourite positions or to leave the menu with "CANCEL" and return to the settings menu.
- Press the connection button when the desired option is displayed.
- Set the desk to the desired height.
- Press the connection button to select the height and then again to save your favourite position.

Note: If you don't want to save this position as a favourite, flip the rocker switch and then press the connection button to cancel the process and return to the favourite positions menu item.

Deleting favourite positions

- In the favourite positions menu, flip the rocker switch up or down to access the menu item "DELETE FAVOURITES". You can delete all set favourite positions in this menu.
- Press the connection button to select this option and once again in the menu to confirm deletion of all favourite positions.

If you don't want to delete all of the favourite positions, flip the rocker switch and then press the connection button to cancel the process and return to the "DELETE FAVOURITES" menu item.

4.6 Limits

First of all, proceed as described in Section 4.2 to access the settings mode. Then select the item "LIMITS" from the settings menu and press the connection button to open the function. You can use this function to set your favourite position.

- *Flip the rocker switch up or down to access the menu for the lower or upper limits, to select the option "DELETE LIMITS" to delete all set limits; or "CANCEL" to leave the menu and return to the settings menu.*
- *Press the connection button when the desired option is displayed.*
- *Set the desk to the desired height.*
- *Press the connection button to select the height and then again to save the limit.*

If you don't want to save this limit, flip the rocker switch and then press the connection button to cancel the process and return to the favourite positions menu item.

4.7 Restore

First of all, proceed as described in Section 4.2 to access the settings mode. Then select the item "RESTORE" from the settings menu and press the connection button to open the function. You can use this function to set your favourite position. In this menu, you can restore the DPI to the factory settings.

- Press the connection button again to confirm.

If you don't want to restore the DPI, flip the rocker switch and then press the connection button to cancel the process and return to the "RESTORE" menu item.

4.8 Button lock/safety mechanism in private premises


The handswitch (VS part No. 88-1024) must be secured using a locking function when the table is used in private premises. If this function is not present, please contact VS Customer Services (Tel. +49 (0)9341/880)!



Caution!

If the handswitch is locked, a padlock lights up in the display.

To unlock the control element (**Figure 7**), press the connection button **(2)** on the underside of the handset and tilt the handset **(1)** up or down twice at short intervals. When the handset is unlocked, the height is shown on the display. The handset is now activated. You can adjust the table as required by pressing the handset.

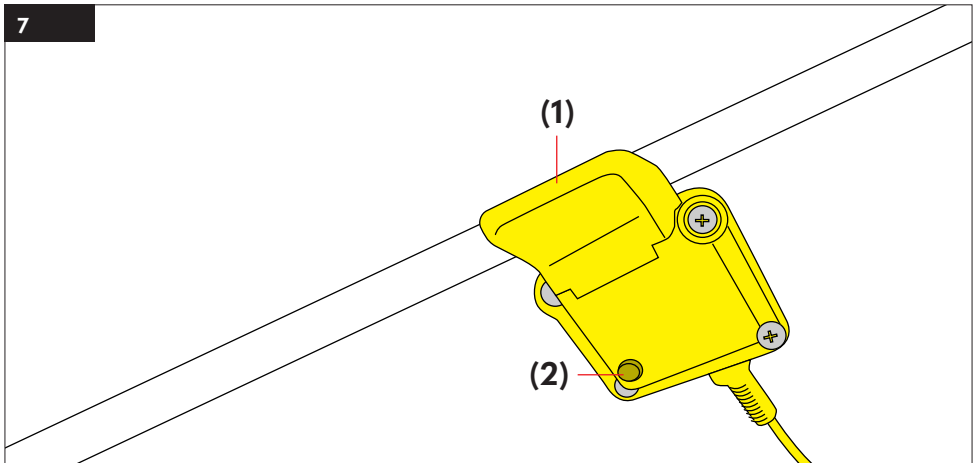

The handswitch then remains activated for a short time. If you do not press any further buttons during this time then the handswitch is locked again.

5. Troubleshooting

5.1 The table does not move

- Check whether the maximum operating time has been exceeded (see Section 9) and the operating time restriction has been activated.
- Check whether all the cables are inserted correctly (and whether there is an electricity supply).
- Make sure that the load (see Section 9) on the table is not too high.
- Make sure that no obstacles are blocking the travel path.

5.2 Reset travel (initialisation)



Caution! In the event of a malfunction, a manual reset (initialisation) must be performed.

The reset position is reached at a table height of ≤ 650 mm. When operating the table, the user must always make sure that the travel path is free from obstacles (in particular below the table). The system is initialised by tilting the handswitch downwards and holding it down. This must be pressed and held down until the drives reach the lower stop position. As soon as the drives reach the lower stop position, it is necessary to release the handswitch for 2-3 seconds and then press and hold it down for a further 5 seconds. Initialisation is now complete. The system is lowered by 5 mm and then raised again during initialisation. Please do not release the handswitch during initialisation.



Caution! If the handswitch is released before the operation has been completed then initialisation will be interrupted and has to be repeated. If initialisation is interrupted, the system cannot travel upwards.



Caution! If the handswitch is locked, a padlock lights up in the display. Please see No. 4.8 for information on unlocking the handswitch.

If a safety stop has been set then it is important to note that the system must travel to the lower stop position before initialisation can be started. To override the set safety stop, it is necessary to

press the handswitch down a second time after the preliminary stop is reached to cause the system to travel to the lower end stop at approximately half its drive speed. After a successful reset, the system travels the first two times to the topmost position and then approximately 3 mm back again.

5.3 Error codes

An error number is shown on the display

Error code	Meaning	Remedy/description
E-01	Loss of position	Perform a reset
E-16	Button error	Wrong button combination pressed on handswitch, button combination not supported
E-59	Collision protection Channel 1	The table's collision protection has, been triggered, check the travel path remove obstacles
E-60	Collision protection Channel 2	The table's collision protection has, been triggered, check the travel path remove obstacles



Caution! During the warranty period, the drive elements may only be replaced by the VS Customer Services (VS-KD).




Important! If you have any further questions, please consult your responsible expert VS consultant or the appropriate VS branch.

5.4 Troubleshooting customer/VS Customer Services





Caution! The replacement of the drive technology is only permitted by VS Customer Services (VS-KD)!

When contacting VS Customer Services, please use the model No. and the serial No. of the table. This can be found on a rating plate on the underside of the table top [Figure 8].

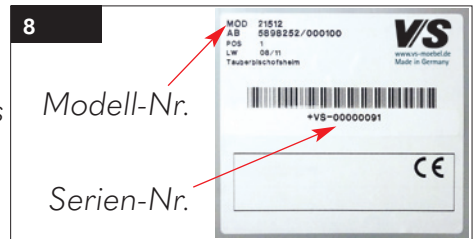

Error	Error description	Troubleshooting
Drives don't work	Control unit not connected	Connect network cable
	Drive not connected	Plug in motor cable
	Poor plug-in contact	Connect table handswitch, network or motor connector correctly
	Drive faulty	Please contact Customer Services
	Control unit faulty	Please contact Customer Services
	Table handswitch faulty	Replace the table handswitch
Drive runs in only one direction	Control unit faulty	Please contact Customer Services
	Table handswitch faulty	Replace the table handswitch
Control unit or table handswitch doesn't work	Control unit not connected	Connect network cable
	Table handswitch not connected	Connect table handswitch
	Control unit faulty	Please contact Customer Services
	Network cable faulty	Please contact Customer Services
	Table handswitch faulty	Replace the table handswitch
	Poor plug-in contact	Connect contact correctly

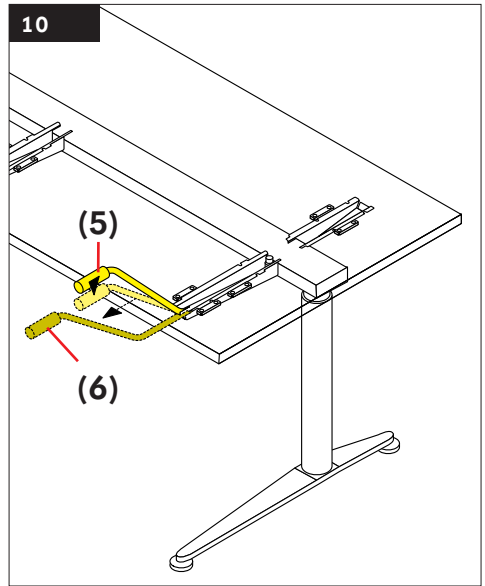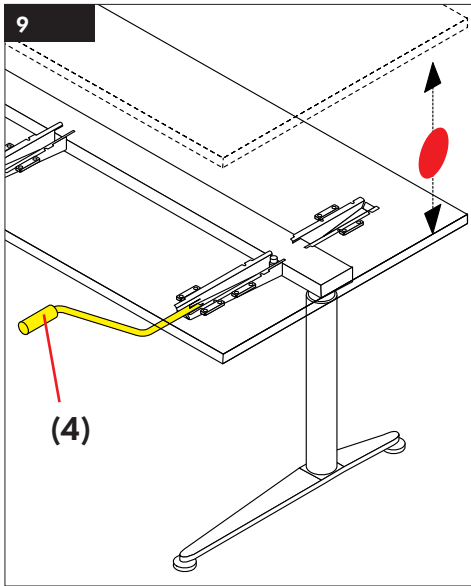

6. Tables with winding handle for height adjustment

Seat/seat adjustment: approx. 65 - 86 cm per handle turn 3mm

Seat/standing adjustment: approx. 65 - 129 cm per handle turn 40mm

To adjust the height **[Figure 9]**, rotate the winding handle **(4)**; clockwise for up, anticlockwise for down.


The manual winding handle **(4)** is locked in the park position **(5)** below the table top **[Figure 10]**. To adjust the height, release the handle from its locked position and pull it forwards until it engages in its operating position **(6)** **[Figure 10]**.

Important!

Crank height adjustment Lifting load 45 kg.



Caution! After the table height has been adjusted, the manual winding handle must be locked in the park position again.

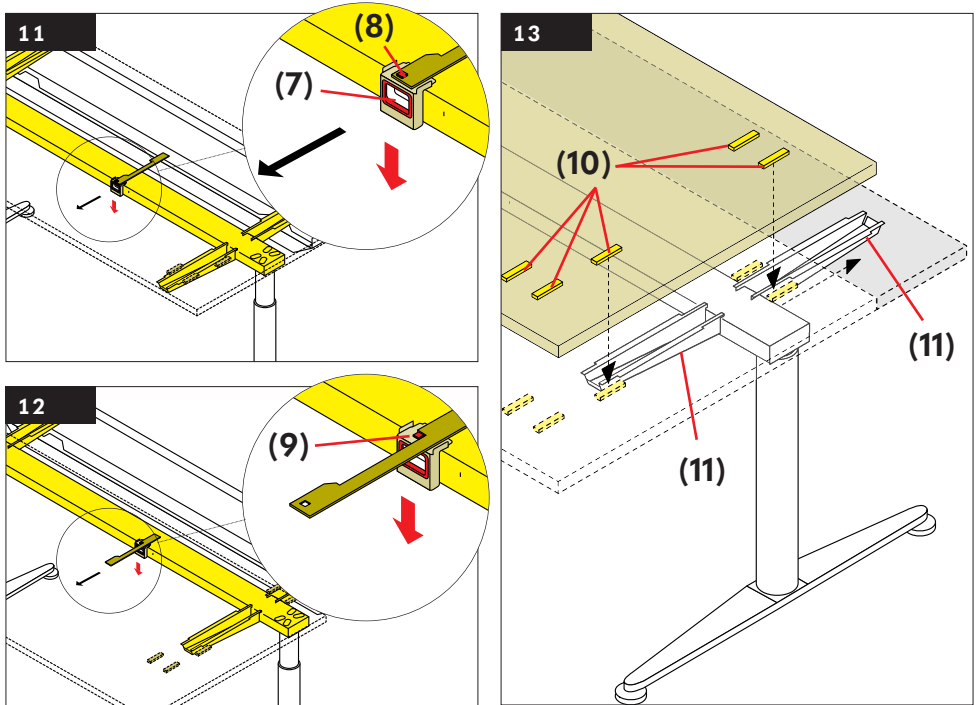

7. Table management



7.1 Moving/removing the table top (only for Pro tables)

To move or remove **[Figures 1-2]** the table, briefly press the locking mechanism (7) on the underside down to release the first safety stop (8). Move the table top to the second stop (9). In this position, the table tray is accessible. To remove the table top, unlock it again and pull it over the second safety mechanism.

⚠ Caution! When moving/removing the table top, always keep the electrical connection flap open and make sure that there is sufficient cable length.

To insert **[Figure 13]**, align the guides **(10)** on the bottom side of the table top with the two table brackets **(11)**. Push the inserted top as far as the first stop and activate the safety handle. Unlock the second safety stop to push the table top into its end position.

⚠ Caution! Clear all items from the table top before moving/removing it.

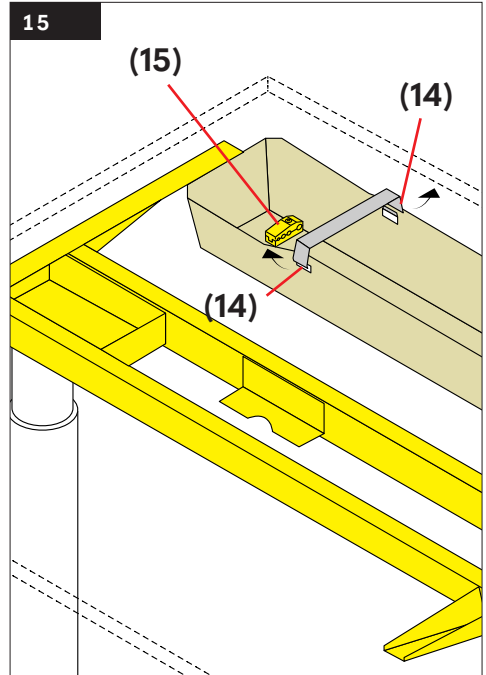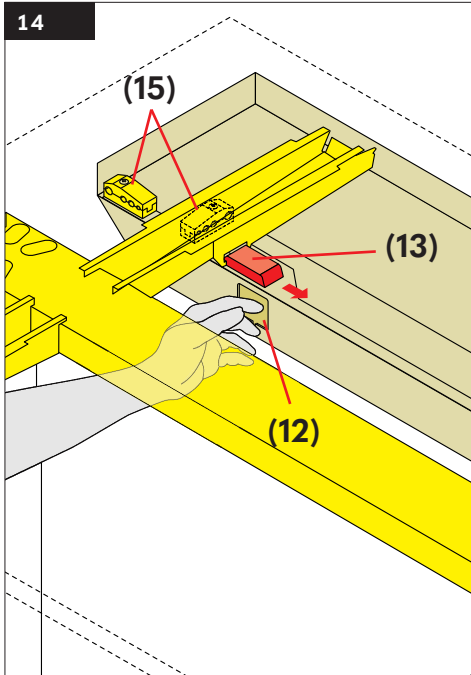

7.2 Cable trays

The metal cable tray can be removed or folded down.

For Pro tables, this is done using the two plastic latches on the right and left **[Figure 14]**. To do this, reach through the cut-outs **(12)** and push the two plastic latches **(13)** of the left and right sides inwards at the same time.

To close again, move the folded down side of the metal cable tray upwards again and ensure that it audibly engages in the locking mechanism.

For Base tables, the cable tray is suspended from the metal hooks **(14)** **[Figure 15]**.



Caution!





Use the strain relief mechanisms for the cable trays.

The strain relief mechanisms **(15)** in the metal cable trays can be positioned on the left or right.

7.3 Cable chains

Rectangular cable chain on Pro tables

To attach a rectangular cable chain **(16)** to a metal cable tray, first of all the pre-punched tab **(17)** in the cable tray must be bend inwards. Then, the adapter piece **(18)** of the cable chain is inserted in the tab **(17)** until it engages **[Figures 16 and 17]**.

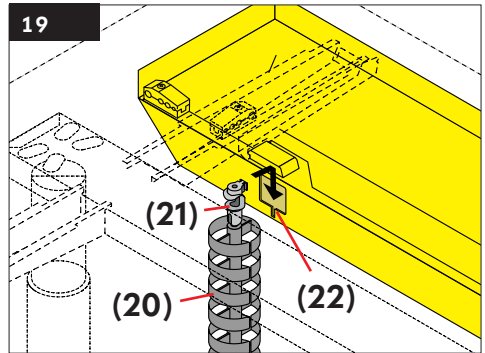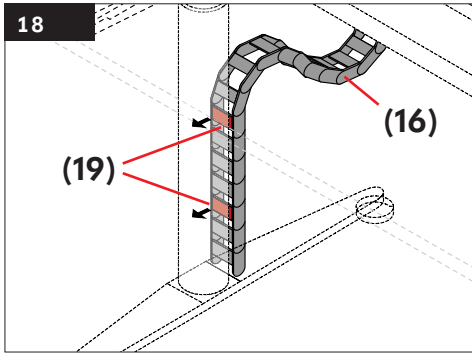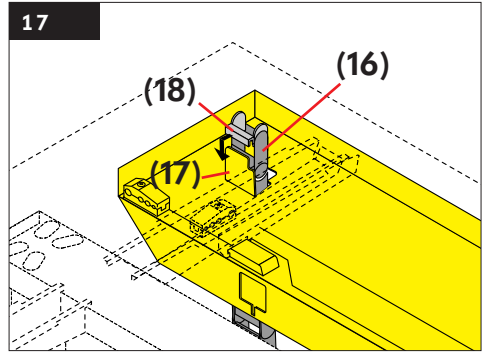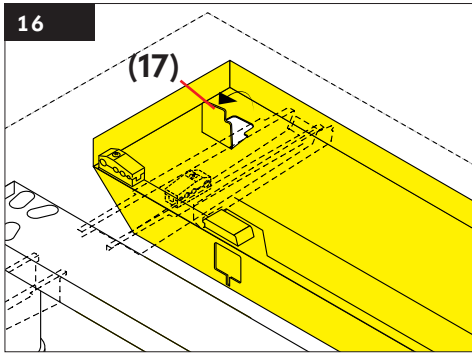


To ensure well-controlled guidance, the chain is fixed to the foot of the table using two built-in magnets (19) [Figure 18].

Round cable chain on Pro tables

In the metal cable tray [Figure 19], the round cable chain (20) is suspended in the punched-out recess (22) with the universal retainer clip (21).

Important! If necessary, shorten the cable chain for grouped positions to prevent collisions.

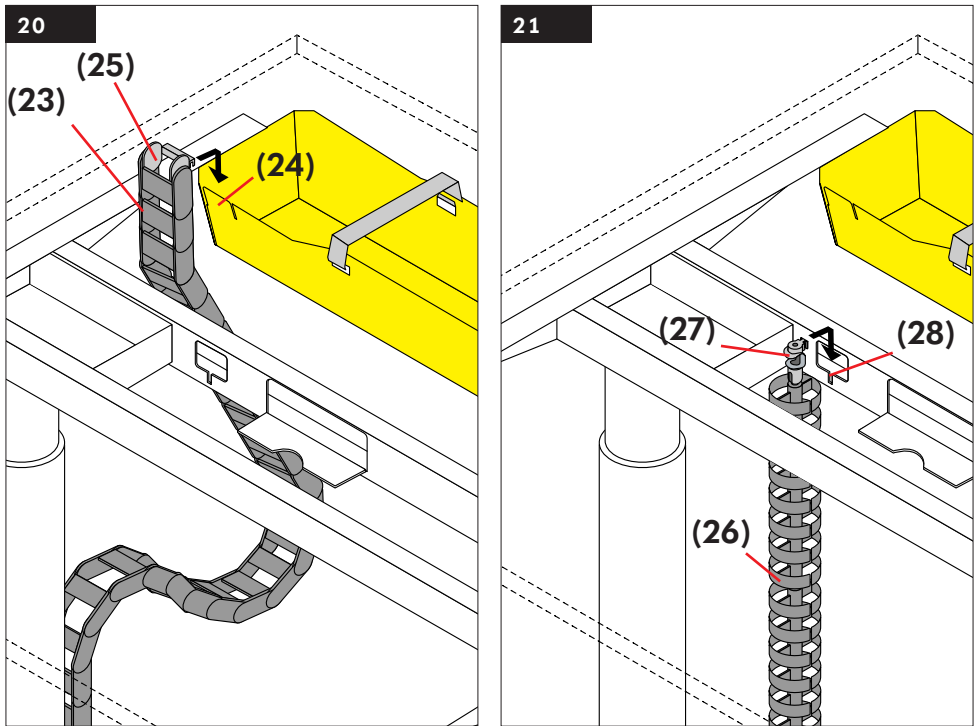

Rectangular cable chain on Base tables

Attach the rectangular cable chain (23) either to the right- or left-hand end of the cable tray by inserting the adapter piece (25) of the cable chain in the dedicated tab (24) in the cable tray until the adapter piece engages [Figure 20].




To ensure well-controlled guidance, the chain is fixed to the foot of the table using two built-in magnets (19) [Figure 18].

Round cable chain on Base tables

In base tables **[Figure 21]**, the round cable chain **(26)** is suspended in the appropriate punched-out recess **(28)** in the traverse with the universal retainer clip **(27)**.



Caution! Use the strain relief mechanisms for the cables in the cable tray.

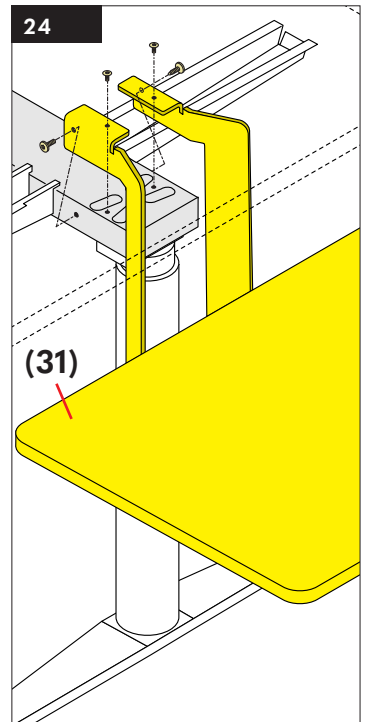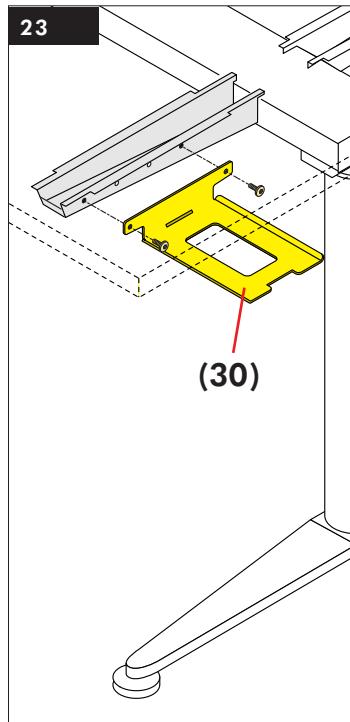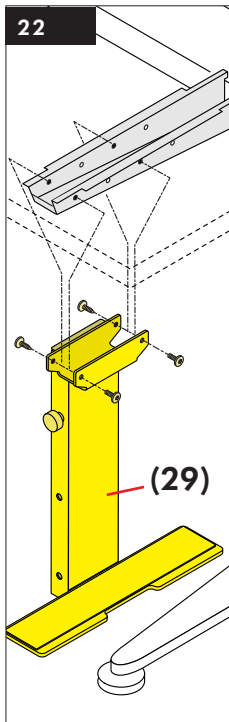



7.4 CPU holder, ThinClient holder, printer board

Fittings on Pro tables

The **CPU holder (29)** (fixed or adjustable) can be fixed on the left or right and can be oriented inwards or outwards **[Figure 22]**. Position it in such a way that the computer does not knock against the table pillar.

The **ThinClient holder (30)** for mini-PCs is screwed to the table bracket on the left or right **[Figure 23]**.

The printer board (31) can be fixed to the table leg on the left or right **[Figure 24]**. To assemble, remove the table top (see Section 7.1). Screw the retaining piece to the table crosspiece from the top and the side. Use the pan-head screws for the top screw fixing.

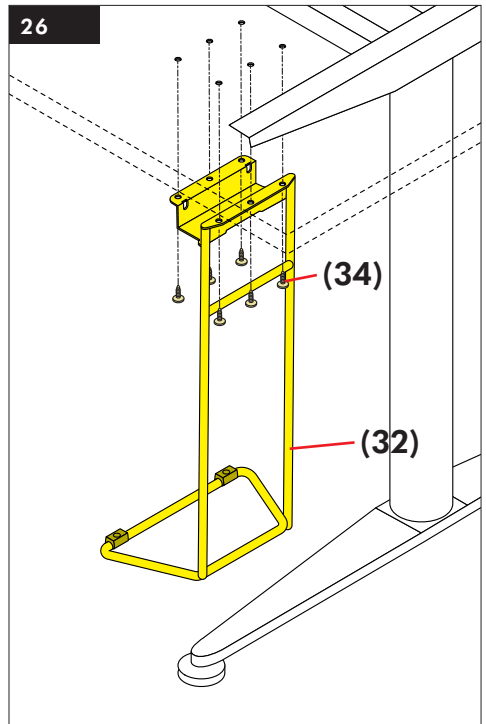
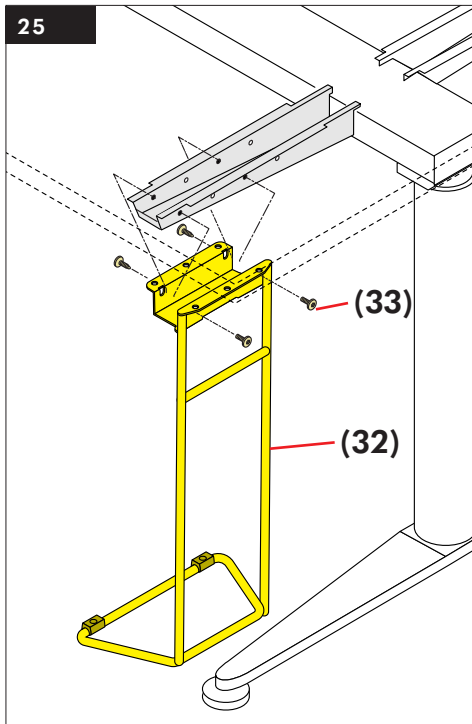


Universal CPU holder for Pro and Base tables

The universal CPU holder **(32)** (model No. 24291) can be fitted to both Pro and Base tables.

For pro tables **[Figure 25]**, the CPU holder is mounted with four screws **(33)** to the side on one of the table brackets.

For base tables **[Figure 26]**, the CPU holder is mounted with six screws **(34)** from below directly on the table top.

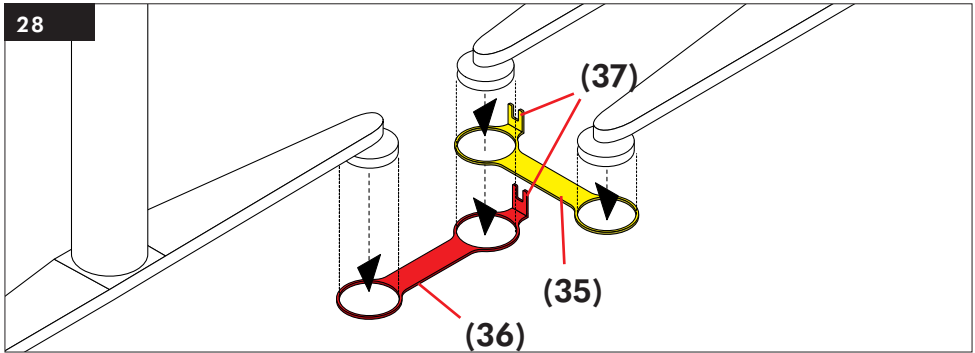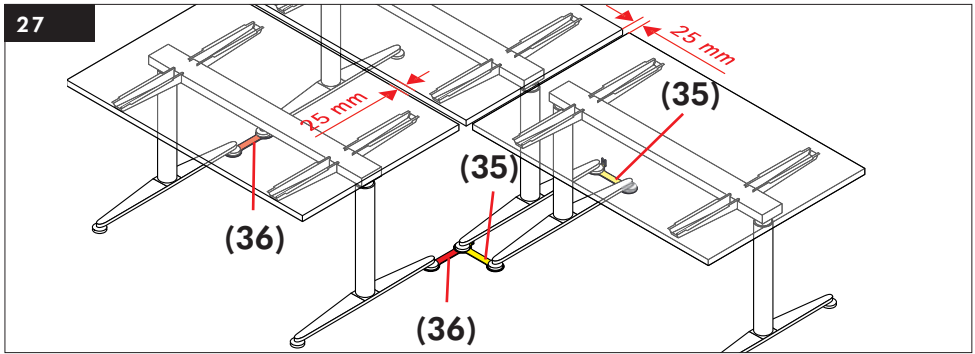


7.5 Table spacers [Figure 27-28]

Position the table spacers for the side **(35)** and front **(36)** linking of tables in such a way that the table feet engage with the corresponding recess. The anti-rotation protection **(37)** of the table spacer must hook into the corresponding opening on the lower side of the table foot.

If both types of table spacer are used at one and the same table foot then the side spacer is located above the front spacer.



Caution! Table spacers ensure that the necessary safety distance of 25 mm is observed.

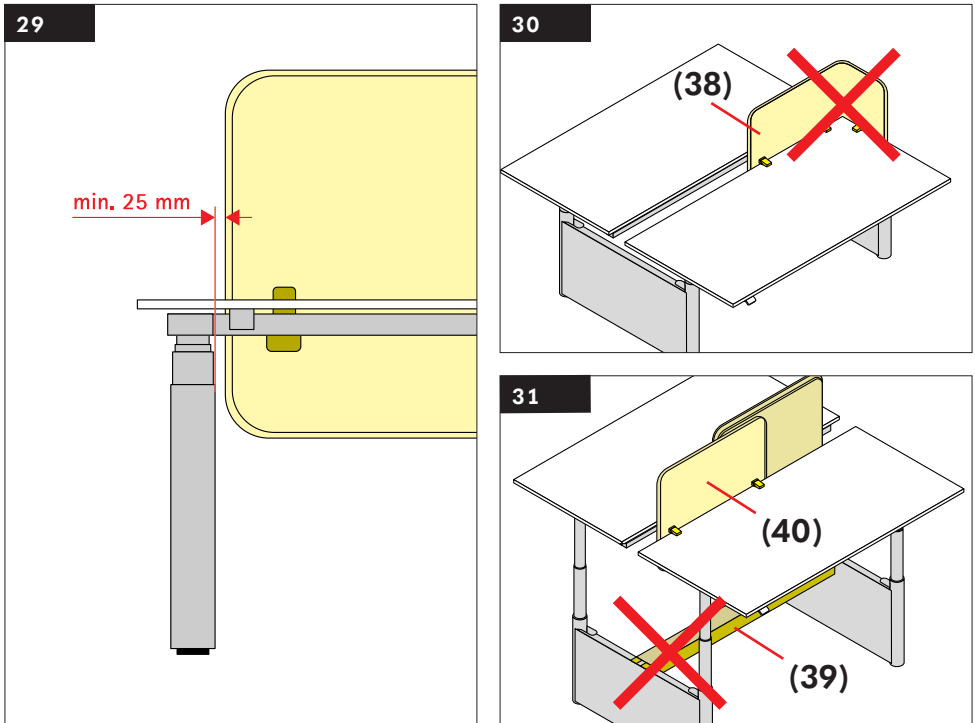

8. Twin double tables


The following must be borne in mind for twin double tables with screens that move with them:

- Moving straight screens must be engaged on the left and right in the leaf area in order to prevent a pinch point between the leaf and the screen. Safety distances of 25 mm must be adhered to **[Figure 29]**.
- A moving corner screen **(38)** from ScreenPlus is not permitted **[Figure 30]!**
- A trough tank **(39)** is not permitted with moving screens **(40)** **[Figure 31]!**



Caution! When using the drive, make sure that no objects or body parts are trapped!

32

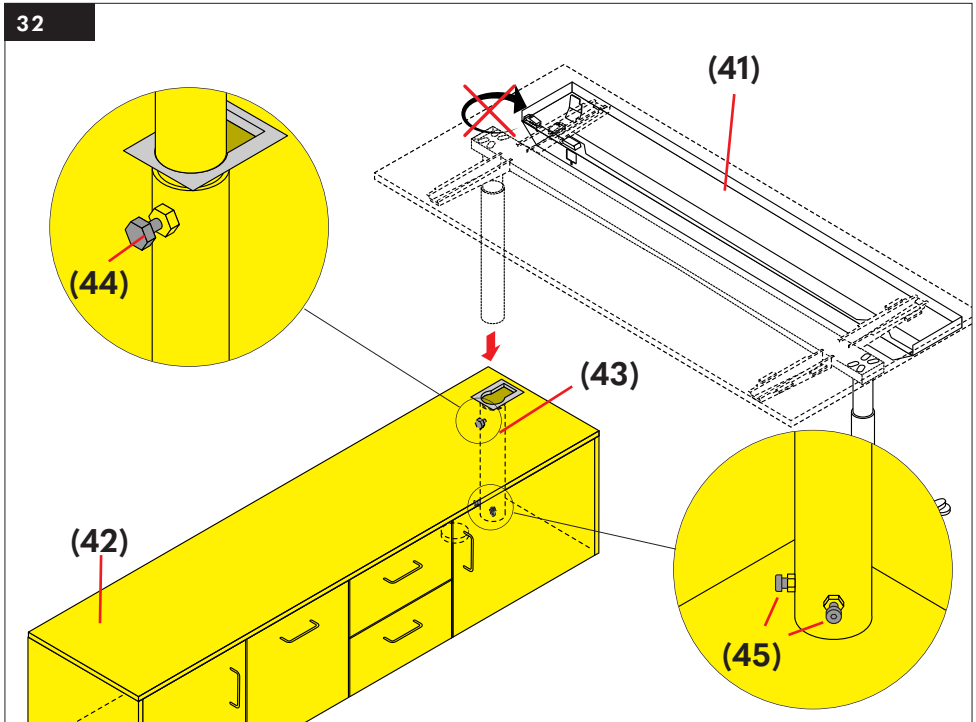

9. Sideboard


To mount the table (41) on the sideboard (42), lift the complete table and then insert the table leg provided for this purpose into the sleeve (43) in the sideboard from above.



Caution! For tables with a round base in particular, make sure that the table is aligned at right angles to the sideboard.

First tighten the two lower clamping screws **(5)** with an Allen key to a maximum torque of 3 Nm.


Then tighten the upper knurled screw **(4)** only hand-tight.

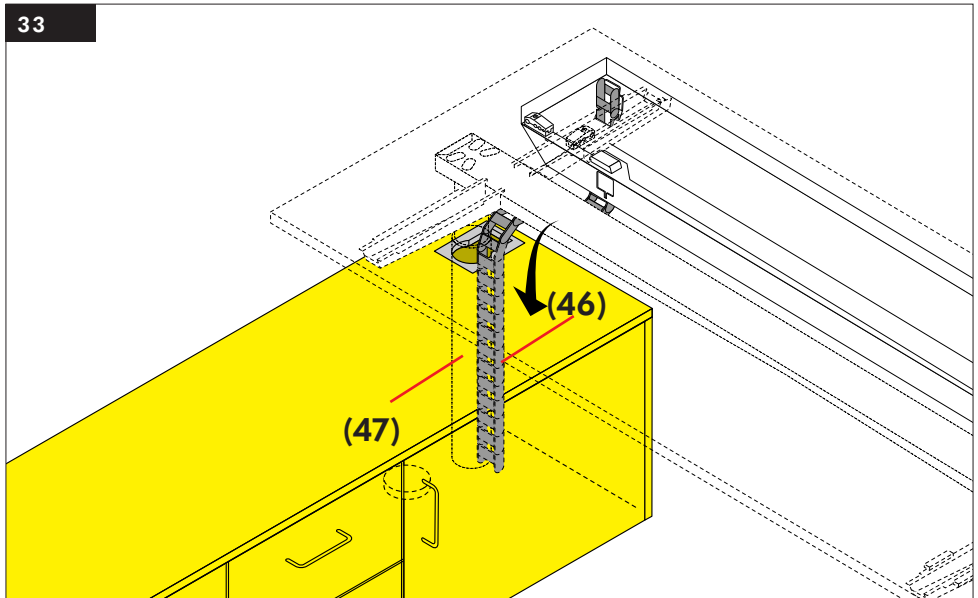


Insert the cable chain **(46)** from above into the opening next to the sleeve **(47)** inside the sideboard and then slide it downwards. The cable chain is held to the table leg with magnets as described on pages 57 and 58.

Then hook the other end of the cable chain into the cable tray (see pages 57 and 58).

10. Technical data

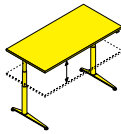

Base

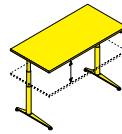

Pro

Name	Base	Pro
The height depends on the choice of variant	min. 65 to 128 cm	min. 65 to 128 cm
Maximum lifting load at	100 kg (full surface area)	100 kg (full surface area)
Operating time	2 minutes "ON" and 18 Minuten "OFF" safety shut-off	1 minutes "ON" and 9 Minuten "OFF" safety shut-off
Ambient temperature for operation	must not be below +10°C and over +40°C	must not be below +10°C and over +40°C
Safety range	—	End position approx. 11 cm above lowest table height
Sound emissions	< 50 dB(A)	< 50 dB(A)
Travel speed	38 ± 2 mm/sec	38 ± 2 mm/sec
Relative humidity	20 – 80 %	20 – 80 %
Power supply	100 – 240 V	230 V
Power consumption	—	300 W when operating with a load
Current consumption	max. 2.5 A	—
Protection type, IP class	IPX0	IPX0
Protection class	II	II
Frequency range	50-60 Hz	50 Hz
Standby power, primary (typical)	0.1 W	0.1 W

11. Notes on ergonomic use

- *Seated/standing workplaces allow you to organise your work in a particularly flexible way. Thanks to the possibility of adjusting the height of the entire working area together with the screen and input devices, it is possible to perform practically any activity either seated or standing.*
- *Recommendations:*
 - A.** *It is better to stand frequently for short periods than to remain standing for a long time.*
 - B.** *You should avoid standing with a static posture.*
 - C.** *2 to 4 changes of posture per hour are advised.*
- *The screen should be positioned so that there are no reflections on it, for example from the lighting or windows. Ideally, you should position the screen in such a way that it is located between two lighting strips and you are looking at it parallel to a window. The top line on the screen should not be above the horizontal visual axis. To permit a comfortable head position, you should look downwards at the centre of the screen at an angle of approximately 35°.*

-
- *The height adjustment mechanism also makes it easy to adjust the correct seating height. If possible, only sit on furniture that is ergonomically shaped and is height-adjustable. The backrest should provide optimum support for the lumbar vertebrae. Observe the manufacturer's instructions about how to adjust the chair exactly to your body size and shape.*
 - *The Council of the European Community has introduced various directives and regulations for workplace ergonomics and these are subject to EU Directive 90/270/EEC.*
 - *Guidelines on the design of screen and office workplaces have been issued by the Verwaltungs-Berufsgenossenschaft in its series of publications on accident prevention (German Social Accident Insurance regulation 215-410).*

*For more detailed information, go to **www.vbg.de***

12. EU Declaration of Conformity

Firma: VS Vereinigte Spezialmöbelfabriken GmbH & Co. KG
Hochhäuser Straße 8
D-97941 Tauberbischofsheim

Typologie: Sitz-Steharbeitsplatz
Benennung: Sitz-Steharbeitsplatz S902 Base/Pro/ProRail/Twin
Modell-Nr.: 24010 bis 24019; 24030 bis 24039; 24050 bis 24059 (CR)
24110 bis 24119; 24130 bis 24139; 24150 bis 24159 (TR)
24310 bis 24319; 24330 bis 24339; 24350 bis 24359 (CQ)
24410 bis 24419; 24430 bis 24439; 24450 bis 24459 (TQ)
24162 bis 24163 (TR Freiform); 24462 bis 24463 (Freiform TQ)
24065 bis 24068; 24075 bis 24078; 24085 bis 24088 (Twin 2R)
24365 bis 24368; 24375 bis 24378; 24385 bis 24388 (Twin 2Q)

Ausführung: C-Fuß / T-Fuß / Twin-Doppeltisch
Sonderausstattung: -/-

Hiermit wird bestätigt, dass das oben bezeichnete Produkt den Bestimmungen folgender EU-Richtlinien entspricht.

Maschinenrichtlinie	2006/42/EG
Ggf. andere einschlägige EU-Richtlinien:	
EMV-Richtlinie	2014/30/EU
RoHS	2011/65/EU

Hinsichtlich der elektrischen Gefahren wurden gemäß Anhang I Nr. 1.5.1 der Maschinenrichtlinie 2006/42/EG die Schutzziele der Niederspannungsrichtlinie 2014/35/EU eingehalten.



*Das Produkt darf nicht über den Hausmüll entsorgt werden.
Die Entsorgung erfolgt an zugelassenen Sammel- und
Rücknahmestellen.*

Tauberbischofsheim, den 24.06.2024


Markus Schimmel SEK

CE-Dokumentations-Bevollmächtigter


Unterschrift

Philipp, Müller
Name, Vorname

Geschäftsführer
Funktion

VS Vereinigte Spezialmöbelfabriken GmbH & Co. KG
Sitz: Tauberbischofsheim
Registergericht: Amtsgericht Mannheim HRA 560116
USt-Id-Nr. DE 146587381
Steuer-Nr. FA 188 80280/04306
Internet: <http://www.vs-moebel.de>
(2701-KE_23_04_2024.docx)

Geschäftsführer:
Philipp Müller
Komplementär:
VS Vereinigte Spezialmöbelfabriken Verwaltungs-GmbH
Sitz: Tauberbischofsheim
Registergericht: Amtsgericht Mannheim HRB 560029

Bankverbindungen:
Sparkasse Tauberfranken IBAN: DE32 8735 2565 0002 0008 26 BIC: SOLADES1108
Commerzbank Würzburg IBAN: DE22 7904 0047 0882 2233 00 BIC: COBADE33XXX
Landesbank Baden-Württemberg IBAN: DE94 6005 0101 0002 0503 02 BIC: SOLADES1
Volksbank Main-Tauber eG IBAN: DE51 6739 0000 0070 3218 07 BIC: GENODE33WTH
Deutsche Bank Würzburg IBAN: DE29 7907 0016 0022 6233 00 BIC: DEUTDE33HAN
Hypovereinsbank Würzburg IBAN: DE14 7902 0076 0001 4839 34 BIC: HYVEDE33HAN

Notes: