




http://links.vs-service.com/downloads/70-357_V09_DEEN_S910-Hoehenverstellung.pdf

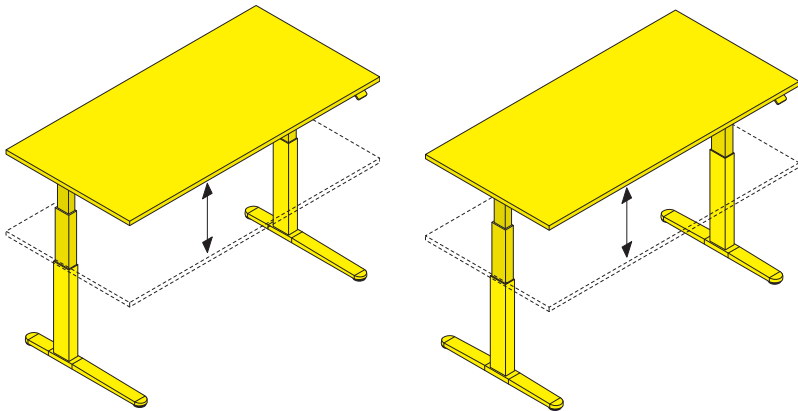

Bedienungsanleitung

Serie 910
Höhenverstellbarer
Sitz-/ Steharbeitsplatz.
C-Fuß, T-Fuß.

Bitte sorgfältig aufbewahren!

Operating Instructions

Serie 910
Height-adjustable
seated/standing workplace.
C-foot, T-foot.

*Please keep these Instructions
carefully!*



Mail: vs@vs-moebel.de - Web: www.vs.de
Phone: +49 93 41 88-0
ID: 70-357_BA_EN - V09 - 11.12.2025

Contents

General safety instructions	38	5.3 Error codes	57
Safety instructions	38	5.4 Troubleshooting – customer /	
1. General comments:	41	VS Customer Service	57
1.1 Importance of the Operating		6. Tables with winding handle for	
Instructions:	41	height adjustment	59
1.2 Intended use (scope):	42	7. Table management	60
1.3 Incorrect use:	42	7.1 Moving/removing	
1.4 Scope of delivery, assembly,		the table top	
transport, storage:	44	607.2 Cable trays	61
1.5 Transfer and Disposal:	44	7.3 Cable chains	62
2. Safety notes	44	7.4 CPU holder, ThinClient	
3. Collision protection	47	holder, printer board	63
3.1 Information on collision		7.5 Table spacers [Figure 1-2]	64
protection	47	7.6 Electrical connection flap/E-box	
3.2 Notes on use	47	[Figure 3-4]	65
4. Using the table handswitch.	48	8. Twin dual desk	66
4.1 Height adjustmen	48	9. Technical data	67
4.2 Saved positions	49	10. Notes on ergonomic use	68
4.3 Button lock/safety mechanism		11. EU-Konformitätserklärung	70
in private premises	51		
4.4 Bluetooth® connection	52		
4.5 Reminder / Setting the			
reminder interval	52		
4.6 Container and shelf stop	54		
5. Troubleshooting	55		
5.1 The table does not move	55		
5.2 Reset travel (initialization)	55		

General safety instructions

The following symbols and notes are used in our Instructions:



Important!

This symbol indicates an important assembly note.



Caution!

This symbol indicates a very important note.

Safety instructions



Caution! Please read these instructions carefully before starting to use the system and keep them in a safe place for future reference. They are also available via download: (see title in header).



Caution! The seated/standing workplace may only be used in private premises if fitted with a special locking mechanism (see section 4.3). It is essential that this locking mechanism is activated to prevent unauthorised use!



Caution!

Children must not play with the equipment.



Caution! Rodents should be kept away from electrical operating equipment and their power supply lines. Damaged lines may pose a risk to humans and animals.



Caution! *It is essential to follow the safety instructions! Incorrect operation of the system may cause risks to persons and property!*



Important! *Office furniture containing electrical installations must be inspected in accordance with the accident prevention regulations and generally acknowledged rules of sound practice, and the specified inspection intervals must be adhered to!*



Caution! *When using the drive, make sure that no objects (e.g. items of furniture) or body parts are trapped! When operating the table, the user must always make sure that no other persons are present at the table and that the travel path is free from obstacles. A minimum distance of 25 mm from nearby objects must be maintained in order to avoid the possibility of trapping and shearing!*



Caution! *Before taking the system into operation, make sure that the operating voltage of the system corresponds to the local power supply. The system is in operation as soon as it is connected to the power supply.*



Caution! *The collision protection is not an entrapment or personal protection mechanism! For physical reasons, "soft" obstacles may only be poorly detected and evaluated or may not be detected at all! If the table travels against an obstacle then it is possible that the obstacle may suffer damage because the table travels against it at its nominal speed!*



Caution! Before using the table for the first time or in the event of a malfunction, a manual reset (initialization) must be performed.



Caution! If the button is released before the operation has been completed then initialization will be interrupted and has to be repeated. If initialization is interrupted then the system cannot travel upwards.



Caution! When using the drive, make sure that no objects or body parts are trapped!



Caution! If the handswitch is locked, a padlock lights up in the display. The light turns red for one second.



Caution! If the table travels against an obstacle then it is possible that the obstacle may be damaged because the table travels against it at its nominal speed!



Caution! During the warranty period, the drive elements may only be replaced by the VS Customer Service (VS-KD).



Important! If you have any further questions, please consult your responsible expert VS consultant or the appropriate VS branch.



Caution! After the table height has been adjusted, the manual winding handle must be locked in the park position again.



Caution! When moving the table top, always keep the electrical connection flap open.



Caution! Clear all items from the table top before moving or removing it.



Caution! Use the strain relief mechanisms for the cable trays.



Caution! Height-adjustable tables pose a risk of crushing. Table spacers ensure that the necessary safety distance is observed.

1. General comments



Caution! Please read these instructions carefully before starting to use the system and keep them in a safe place for future reference. They are also available via download:

1.1 Importance of the Operating Instructions:

- Knowledge of the basic notes on safety and the safety instructions is vital in order to ensure the safe handling and fault-free operation of this seated/standing workplace.
- These Operating Instructions contain the most important information to ensure the safe use of the seated/standing workplace.
- Anyone who works at the seated/standing workplace (e.g. maintenance personnel, operators, technical managers, electricians) must be familiar with these Operating Instructions, and in particular the notes on safety.

- *In addition, the rules and regulations on accident prevention that apply at the place of use must be adhered to.*
- *All the information in these Instructions is valid at the time of printing. Product technology or design may be subject to change in order to bring about improvements to the product.*

1.2 Intended use (scope):

The current seated/standing workplace is an office work table/screen workstation that has been designed exclusively for seated and standing office activities and is therefore intended for this use only. Any other use or use beyond the intended scope (e.g. in workshops, storage areas, explosive areas, damp locations) is considered to be non-intended use. The company VS Vereinigte Spezialmöbelfabriken GmbH&Co.KG accepts no responsibility for any loss or damage resulting from such use.



Caution! *The seated/standing workplace may only be used in private premises if fitted with a special locking mechanism (see section 4.3). It is essential that this locking mechanism is activated to prevent unauthorised use!*

1.3 Incorrect use:

- *This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Cleaning shall not be made by children without supervision.*

-
- Never use the seated/standing workplace to lift persons or loads.
 - Only load the seated/standing workplace up to the maximum load per-mitted across the full surface of the table (see sec. 8 "Technical data").

**Caution!**

Children must not play with the equipment.




Caution! Rodents should be kept away from electrical operating equipment and their power supply lines. Damaged lines may pose a risk to humans and animals.

1.4 Scope of delivery, assembly, transport, storage:

- VS Vereinigte Spezialmöbelfabriken GmbH & Co KG delivers the seated/standing workplace fully assembled.
- During the warranty period, repairs may only be performed by employees of VS Vereinigte Spezialmöbelfabriken GmbH & Co. KG.
- The assembly of subsequently supplied accessories and/or conversion operations made necessary by them may only be performed by persons who are perfectly familiar with the assembly instructions. Only original VS accessories may be used.
- If you have to move the seated/standing workplace, make sure that the plug has been disconnected from the mains and that there are no objects on the table.
- Only carry the seated/standing workplace by its frame or use a trolley (furniture trolley).

- The seated/standing workplace may only be moved by two persons working together and it must be in its retracted state. Do not under any circumstances pull or tip the seated/standing workplace.

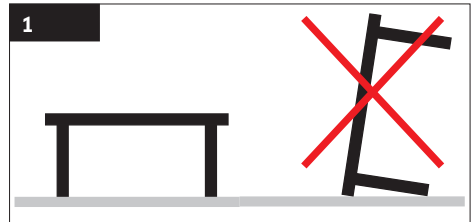

- If tables are stored, a maximum of one table may be stacked on another. Avoid damage when doing this. When stacked, the table must be in its lowest position. Only store tables in their normal working position **[Figure 1]**.

1.5 Transfer and Disposal:

- If the product is transferred to another party then it must be accompanied by these Instructions. Please contact your responsible local authority department regarding environmentally friendly disposal.
- The indicated electric and electronic components must not be disposed of with the ordinary waste. They must be removed from the furniture unit before the unit is sent for disposal. They are to be disposed of at authorized collection and return points.



2. Safety notes

Caution! It is essential to follow the safety instructions! Incorrect operation of the system may cause risks to persons and property!

-
- *Never open the housing of the controller or of the power pack! Unauthorised opening of the housing and incorrect repairs may cause risks for users and will render the warranty null and void. The electrical equipment may only be opened and repaired by the VS Customer Service!*
 - *In the case of malfunctions such as the emission of smoke or odours or in the event of unusual noises or visible external damage, do not continue to use the equipment. Disconnect the power plug from the mains and inform the VS Customer Service (Tel.: +49 (0)9341/880)!*
 - *The mains connection line to the mains socket must be located close to the table and must be easily accessible.*
 - *Electrical supply lines must not be exposed to any risk of crushing or any strain due to bending or pulling! You must also make sure that the cables are long enough to accommodate the up-and-down movement of the table.*
 - *When establishing electrical connections at office furniture, observe the following guidelines: Electrical connections may only be established by specialist personnel!*

 **Important!** *Office furniture containing electrical installations must be inspected in accordance with the accident prevention regulations and generally acknowledged rules of sound practice, and the specified inspection intervals must be adhered to!*

- *Protect electrical components against moisture and dripping or splashed water.*
- *The controller and table handswitch may only be cleaned using a dry or slightly moistened cloth.*



Caution! When using the drive, make sure that no objects (e.g. items of furniture) or body parts are trapped!

When operating the table, the user must always make sure that no other persons are present at the table and that the travel path is free from obstacles. A minimum distance of 25mm from nearby objects must be maintained in order to avoid the possibility of trapping and shearing!

- The table may only be operated with the supplied/installed controller and power supply unit!
- To protect against overvoltages, for example due to storms, it is advisable to install surge protection. Please seek the advice of an electrical fitter.
- Observe the specifications regarding operating times, temperature etc. (see section 8).



Caution! Before taking the system into operation, make sure that the operating voltage of the system corresponds to the local power supply. The system is in operation as soon as it is connected to the power supply.

- Cleaning must not be performed by children unless they are supervised.
- If the equipment's mains power line is damaged, it must be replaced by the manufacturer, the manufacturer's customer service department or a similarly qualified person in order to avoid any risks.

The warranty applies only if the product is used as intended. The product is maintenance-free.

3. Collision protection

Caution! The collision protection is not an entrapment or personal protection mechanism! For physical reasons, "soft" obstacles may only be poorly detected and evaluated or may not be detected at all! If the table travels against an obstacle then it is possible that the obstacle may suffer damage because the table travels against it at its nominal speed!

3.1 Information on collision protection

- If the table meets and detects an obstacle when traveling either upwards or downwards then the upward travel protection prevents the table from inclining or continuing its travel. If an obstacle is detected then the table stops moving and reverse travel is initiated automatically (difference in reverse travel: approx. 5 cm)


3.2 Notes on use

- **Start/acceleration phase:** Once travel has started, obstacles can only be detected after travel of approximately 2 cm, after the nominal speed has been reached.
- **Load:** If the table is not subject to any load then obstacles cannot be or can only be poorly detected
- **Soft obstacles:** Soft obstacles include all types of obstacle that initially give way when the table travels against them, for example as in the case of human body parts, upholstered chairs etc. Soft obstacles cannot be or can only be poorly detected.
- **Operating time restriction:** The electronics monitor how long the drives have been operating. If the maximum permitted time is exceeded then the electronics do not permit continued operation of the drives (see section 8).

4. Using the table handswitch.


4.1 Height adjustment

Three different handswitches with three different functions are used to adjust the table height:

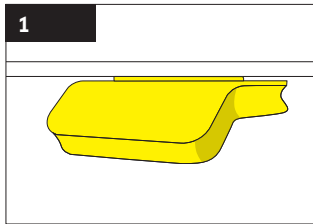


Standard handswitch
[Figure 1]

- Up/down function

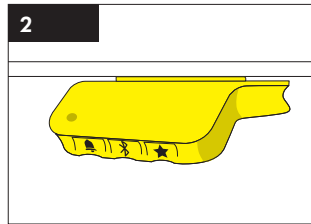

Memory handswitch
[Figure 2]


- Up/down function
- 2 saved positions
- Memory function via LED
- Bluetooth®

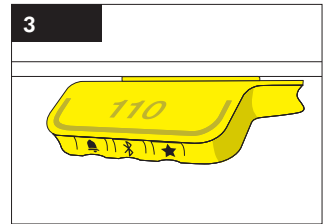

Handswitch Memory display
[Figure 3]


- Up/down function
- 4 saved positions
- Memory function via light strip
- Bluetooth®
- Display

Height adjustment

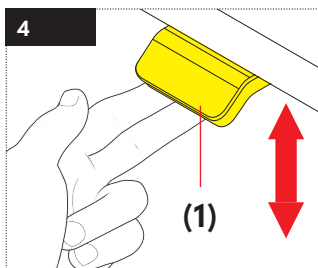

Tilt the handswitch **(1)** upwards to move the table up. Tilt the handswitch **(1)** downwards to move the table down. The drives continue to run for as long as you hold the handswitch **(1)** in a tilted position. The current height of the table is displayed in cm in the handswitch memory display.

- **Soft start/Soft stop:** The drives are operated at reduced power for a short time after starting or before stopping.
- **Safety area:** For safety reasons, the table controller is equipped with two lower stops (safety area) ex works (see section 8). In usual travel operation, a first lower stop is traveled to before the bottom position is reached. Only when the handswitch is pushed again does the table travel to its lowest position at reduced speed.

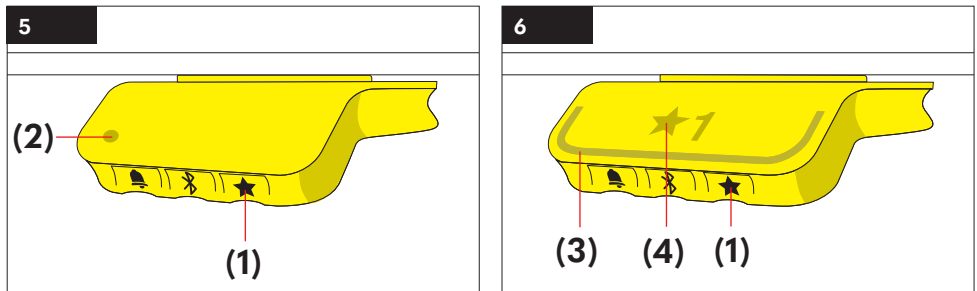

4.2 Saved positions

- Memory and memory display handswitch:
Saving positions 1 and 2
On the right-hand side of the handswitches **[Figure 5]**, there is a “Save” button **(1)** which is indicated by a star ★.
- Move the desktop to a position you like to use and press the star button **(1)** for 2 seconds. On the memory handswitch, the LED **(2)** flashes; on the memory display handswitch **[Figure 2]**, the light strip **(3)** flashes twice to indicate that the position is being memorised.
- Memory display handswitch only **[Figure 6]**: The display indicates the saved position with a star and the position number. The number next to the star corresponds to the sequence in which the positions were saved. First position saved: A star with a “1” next to it **(4)**.

In this way, the positions "1" and "2" are saved.

- *If the user moves the desktop to a different position and then saves this position, this position overwrites the saved position closest to the current position.*
- *Additional function of the memory display handswitch **[Figure 6]:**
Saving positions 3 and 4*

*The handswitch can be used to save four positions. If you press the star button **(1)** briefly, the display indicates one of the four saved positions. You can repeatedly briefly press the star button **(1)** to switch between the four saved positions and choose the number under which the current position is to be saved. For example, the user wants to save the current position as position 3: Keep pressing and releasing the star button until the "star" appears in the display with "3" next to it. Now repeat the same memory operation as described above: Press the star for 2 seconds to save the position.*

- **Moving to saved positions**

After the positions have been saved, it is easy to move to them by pressing and holding down the handswitch. When a saved position is reached, the table stops automatically.

In this way, the user can switch between standing and sitting without having to look at the handswitch.

- *When the table stops at a saved position, the user can press the handswitch for one second and the table travels past the saved position in the direction in which the handswitch was pressed. Alternatively, the user can release the handswitch and then press it again in order to travel past the saved position.*

- **Deleting saved positions**

Press the star button for 8 seconds to delete all the saved positions. The LED or the light strip flashes red when the operation is complete.


4.3 Button lock/safety mechanism in private premises

The handswitch (VS part no. 88-668) must be secured using a locking function when the table is used in private premises. If this function is not present, please contact the:

VS Customer Service (Tel. +49 (0)9341/880)!



Caution! If the handswitch is locked, a padlock lights up in the display. The light turns red for one second.

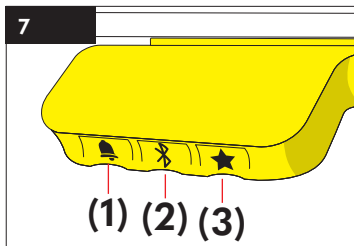


To unlock this control element **[Figure 7]**, press the buttons bell **(1)** - Bluetooth **(2)** - star **(3)** directly after one another (max. 1 second between presses). When the handswitch is unlocked, the height is shown in the display. The handswitch is

now activated. You can adjust the table as you wish by pressing the handswitch.

The handswitch then remains activated for a further 5 seconds. If you do not press any further buttons during this time then the handswitch is locked again.

4.4 Bluetooth® connection

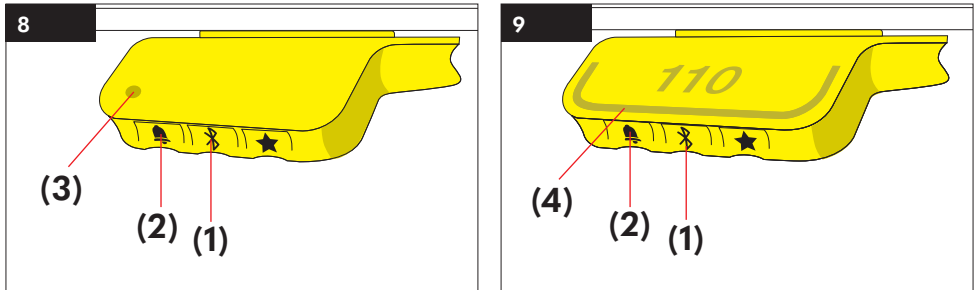

Memory and memory display handswitches [Figure 8-9]:

Download the Desk Control App that is suitable for your device from the App Store or Google Play and connect the app to your device: Press the central Bluetooth® button **(1)** for 2 seconds to activate connection mode. A blue flashing light in the LED **(3)** or in the light strip **(4)** shows that connection mode is active.

In the memory display handswitch, the display shows the Bluetooth ID of the desk, which consists of "DESK" followed by a four-digit number. Search for this ID in the list of nearby desks.

4.5 Reminder / Setting the reminder interval

Handswitch memory and memory-display [Figure 8-9]:

The handswitches have a "reminder button" on the left-hand side **(2)** – this is indicated by a bell. Pressing this button sets the interval after which you want to be reminded to change position.

In the memory handswitch, the LED **(3)** lights up in three different intensities, each of which represents an interval. In the memory display handswitch, each white block on the light strip **(4)** represents an interval.

The three intervals are:

- Interval 1: Reminder after 55 minutes of sitting
- Interval 2: Reminder after 50 minutes of sitting
- Interval 3: Reminder after 45 minutes of sitting

The standard interval selected by default reminds you after 55 minutes. In this case the LED glows with the weakest intensity or only one bar lights up in the light strip. You can easily switch between the intervals by pressing the "bell" button. If the LED or bar does not light up then the reminder function is deactivated.

You can use the Desk Control App to customise the three intervals to user-defined functions.

- **Resetting the reminder**

You can reset the reminder function to the default values by pressing the "bell" symbol for 8 seconds. Depending on the model, the LED will glow red or the display will indicate a count-down and the bar will flash to show when the operation has been completed.

- **LED reminder**

The status of the user of the desk is indicated by the LED in the bottom left corner or by the light strip.

The status depends on the selected reminder interval. If the user changes the position in an appropriate period in accordance with the interval then the LED or light strip slowly flashes green. When the sitting interval expires, the slow flashing green signal starts flashing green quickly and then turns constant orange – this tells the user that it is time to move the desk upwards and stand up.

When the desk is at standing height, the LED or light strip flashes green until interrupted. When the desk is moved back down into sitting position, the LED flashes green until the reminder function becomes deactivated again.

After 4 hours without any action, the LED or light strip switches off. When the handswitch is pressed, the green light comes on again.

Please note: If the reminder LED is activated then the handswitch is no longer in standby mode as long as the light is on/active.

4.6 Container and shelf stop

Up/down with memory and up/down with memory and display
These two functions can be used in order to limit the travel range of the desk (for example, if there is a container under the desk).

A container stop position can be set in the lower half of the travel range and a shelf stop position in the top half. If a container stop position is set then this acts as a new lower stop position. A shelf stop position corresponds to a new upper stop position for the travel range. Proceed as follows to save a container/shelf stop position:

- *Move the desk to a position you want by pressing up or down.*
- *To set a container stop position, hold the Bluetooth® button down for 8 seconds and simultaneously press the handswitch downwards.*
- *To set a shelf stop position, hold the Bluetooth® button down for 8 seconds and simultaneously press the handswitch upwards.*
- *The LED flashes white twice to confirm.*
- *To delete these stop positions, press and hold down the star and bell buttons for 8 seconds*

5. Troubleshooting

5.1 The table does not move

- *heck whether the maximum operating time has been exceeded (see section 8) and the operating time restriction has been activated.*
- *Check whether all the cables are inserted correctly (and if necessary whether there is a functioning electricity supply)*
- *Make sure that the load (see section 8) on the table is not too high.*
- *Make sure that no obstacles are blocking the travel path.*

5.2 Reset travel (initialization)



Caution! *In the event of a malfunction, a manual reset (initialization) must be performed.*

The reset position is reached at a table height of ≤ 650 mm. When operating the table, the user must always make sure that the travel path is free from obstacles (in particular below the table). The system is initialized by tilting the handswitch downwards and holding it down. This must be pressed and held down until the drives reach the lower stop position. As soon as the drives reach the lower stop position, it is necessary to release the handswitch for 2-3 seconds and then press and hold it down for a further 5 seconds. Initialization is now complete. The system is lowered by 5 mm and then raised again during initialization. Please do not release the handswitch during initialization.



Caution! If the handswitch is released before the operation has been completed then initialization will be interrupted and has to be repeated. If initialization is interrupted then the system cannot travel upwards.



Caution! If the handswitch is locked, a padlock lights up in the display and the light turns red for one second. Please see point 4.4 for information on unlocking the handswitch.

If a safety stop has been set then it is important to note that the system must travel to the lower stop position before initialization can be started. To override the set safety stop, it is necessary to press the handswitch down a second time after the preliminary stop is reached to cause the system to travel to the lower end stop with approximately half its drive speed. After a successful reset, the system travels the first two times to the topmost position and then approximately 3 mm back again.

10

Modell-Nr.



Serien-Nr.

5.3 Error codes An error number is shown at the display

Error code	Meaning	Remedy/description
E-01	Loss of position	Perform a reset
E-16	Button error	Wrong button combination onhandswitch pressed, button combination not supported
E-59	Collision Channel 1	The table's collision protection protection has been triggered, Check the travel path Remove obstacles
E-60	Collision Channel 2	The table's collision protection protection has been triggered, Check the travel path Remove obstacles



Caution! During the warranty period, the drive elements may only be replaced by the VS Customer Service (VS-KD).



Important! If you have any further questions, please consult your responsible expert VS consultant or the appropriate VS branch.

5.4 Troubleshooting – customer / VS Customer Service

Caution! The replacement of the drive technology is only permitted through the VS customer service (VS-KD)!

When contacting the VS customer service, please use the model no. and the serial no. of the table. This can be found on a rating plate on the underside of the tabletop **[Figure 10]**.

Error	Error description	Remedy
Drives don't work	Control unit not connected	Connect network cable
	Drive not connected	Plug in motor cable
	Poor plug-in contact	Connect table handswitch, network or motor connector correctly
	Drive faulty	Please contact Customer Service
	Control unit faulty	Please contact Customer Service
	Table handswitch faulty	Replace the table handswitch
Drive runs in only one direction	Control unit faulty	Please contact Customer Service
	Table handswitch faulty	Please contact Customer Service
Control unit or table handswitch doesn't work	Control unit not not connected	Connect contact connected
	Table handswitch not connected	Connect table handswitch
	Control unit faulty	Please contact Customer Service
	Network cable faulty	Please contact Customer Service
	Table handswitch faulty	Replace the table handswitch
	Poor plug-in contact	Connect contact correctly

Signalling tones

As soon as the control unit is supplied with power, the control unit uses the built-in relays to inform the user acoustically about the system status. The following table shows how the number of tones relates to the various pieces of information.



Number of tones	Status information
------------------------	---------------------------

Movement commands are rejected when a button is pressed with a forced reset: Signal tone. Manual reset see Chap. 4.1 or 4.2

Moving commands are rejected with a signal tone.

Switch-on limit reached:
 Wait for blocking time

For further questions, please contact your responsible VS consultant or the relevant VS branch.

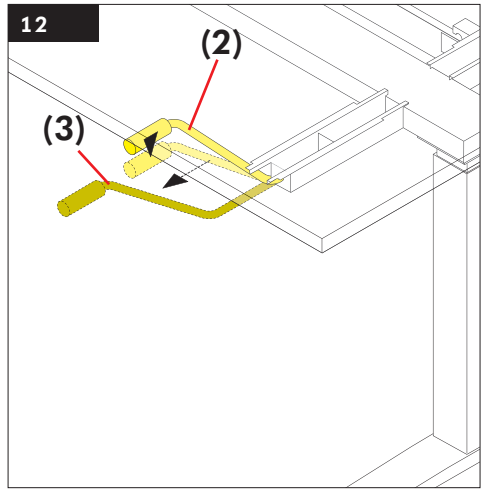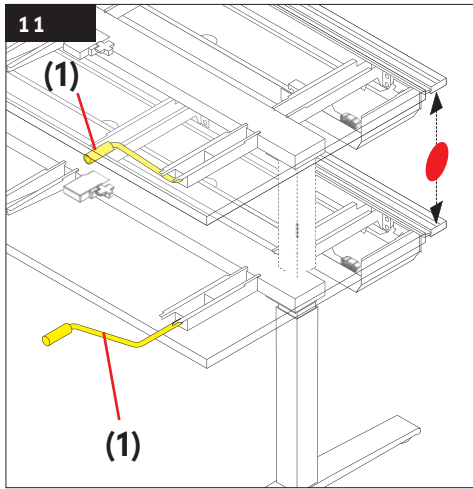

6. Tables with winding handle for height adjustment

Seat/seat adjustment:	65 - 85 cm	3 mm	per handle turn
Seat/seat adjustment:	65 - 85 cm	12 mm	per handle turn
Seat/standing adjustment:	65 - 125 cm	40 mm	per handle turn

To adjust the height **[Figure 11]**, rotate the winding handle **(1)**; clockwise for up - anticlockwise for down.

The manual winding handle **(1)** is locked in the park position **(2)** below the table top **[Figure 12]**. To adjust the height, release the handle from its locked position and pull it forwards until it engages in its operating position **(3)** **[Figure 12]**.






Caution! After the table height has been adjusted, the manual winding handle must be locked in the park position again.

7. Table management

7.1 Moving/removing the table top

To move **[Figures 13-15]** the table top **(1)**, briefly push the safety lever on the bottom side to the left to release the first safety stop **(2)**. Move the table top to the second stop **(3)**. In this position, the table tray is accessible. To remove the table top, unlock it again and pull it over the second safety mechanism.

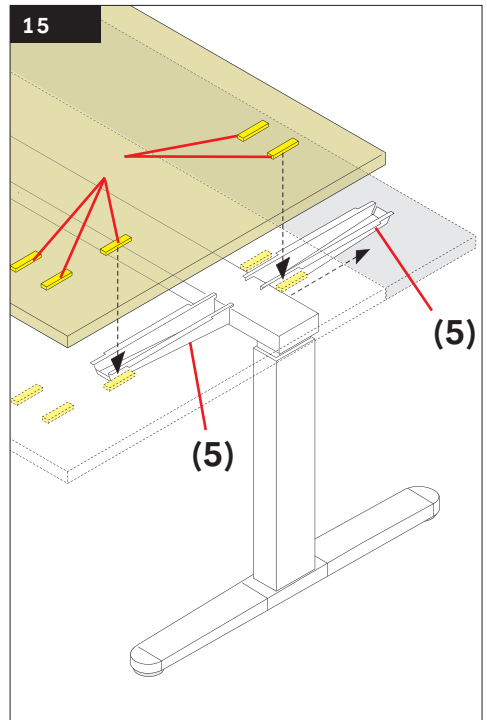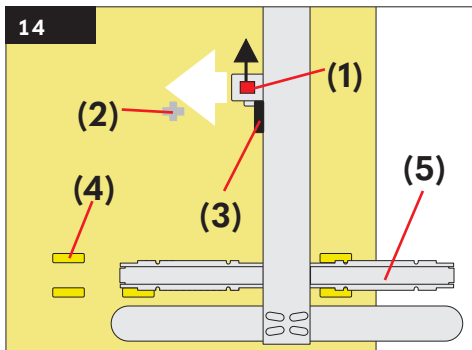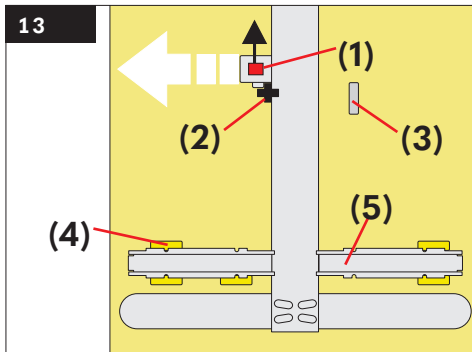



Caution! When moving the table top, always keep the electrical connection flap open.

To remove or insert **[Figure 15]**, align the guides **(4)** on the bottom side of the table top with the two table brackets **(5)**. Push the inserted top as far as the first stop and activate the safety handle. Unlock the second safety stop to push the table top into its end position.

Caution! Clear all items from the table top before moving or removing it.

7.2 Cable trays

The metal cable tray **[Figure 16]** must be unlocked before it can be folded down. To do this, reach through the cut-outs **(1)** and push the two locking bars **(2)** of the left and right sides inwards at the same time.

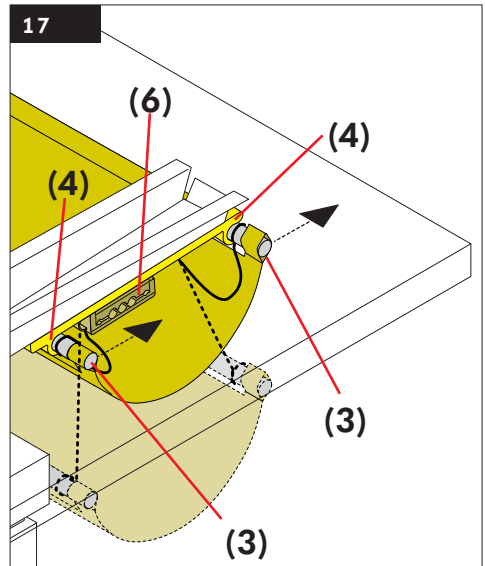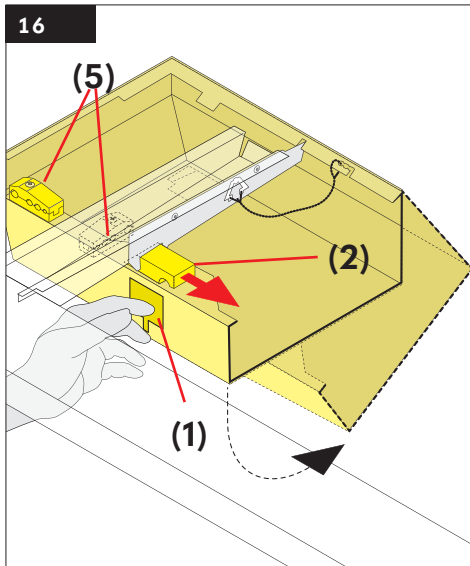

To close again, move the folded down side of the metal cable tray upwards again and ensure that it audibly engages in the locking mechanism. The textile cable tray **[Figure 17]** can be folded down on either side. To open, pull one of the tray's retaining rods **(3)** outwards out of the clip connection **(4)**. The textile tray is closed again by clipping in the retaining rod.



Caution!

Use the strain relief mechanisms for the cable trays.


The strain relief mechanisms **(5)** in the metal cable trays can be positioned on the edge or on the inside. In the case of textile cable trays, the strain relief mechanism **(6)** is located at the reinforcing clip.

7.3 Cable chains

In the case of tables with C-type feet **[Figure 18-19]**, the Cube cable chain **(1)** for metal cable trays is guided from below into the tray and fixed from above with the guide rod **(2)**. In the case of tables with T-type feet **[Figure 20]**, the Cube cable chain is fixed to the outside of the metal cable tray using a magnet. To ensure well-controlled guidance, the chain is fixed to the foot of the table using two built-in magnets.

In the metal cable tray **[Figure 21]**, the round cable chain **(3)** is suspended in the punched-out recess **(4)** by means of the universal retaining clip **(5)**. In the textile cable tray **[Figure 22]**, the universal retaining clip **(5)** is placed in position.

The textile cable hose is fixed directly to the metal cable tray using a magnet and is fixed to the bracket in the case of textile cable trays.

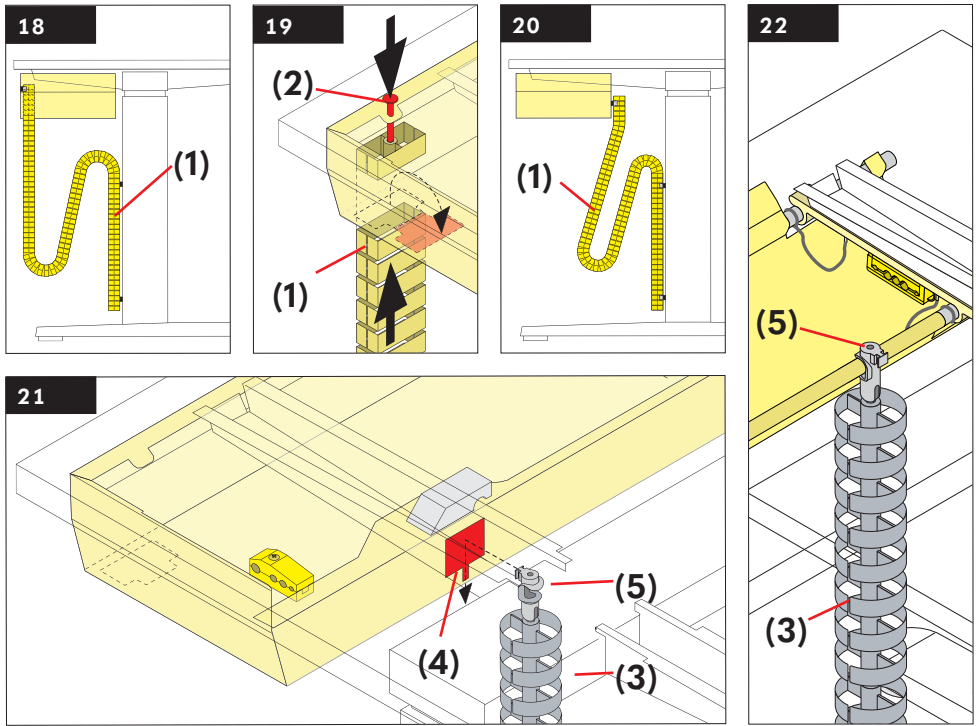


7.4 CPU holder, ThinClient holder, printer board

The CPU holder **(1)** (fixed or adjustable) can be fixed on the left or right and can be oriented inwards or outwards **[Figure 23]**. Position it in such a way that the computer does not knock against the table pillar.

The ThinClient holder **(2)** for mini-PCs is screwed to the table bracket on the left or right **[Figure 24]**.

The printer board **(3)** can be fixed to the table leg on the left or right **[Figure 25]**. To perform assembly, remove the table top (see section 6.1). Screw the retaining piece to the table crosspiece from the top and the side. Use the pan-head screws for the top screw fixing.




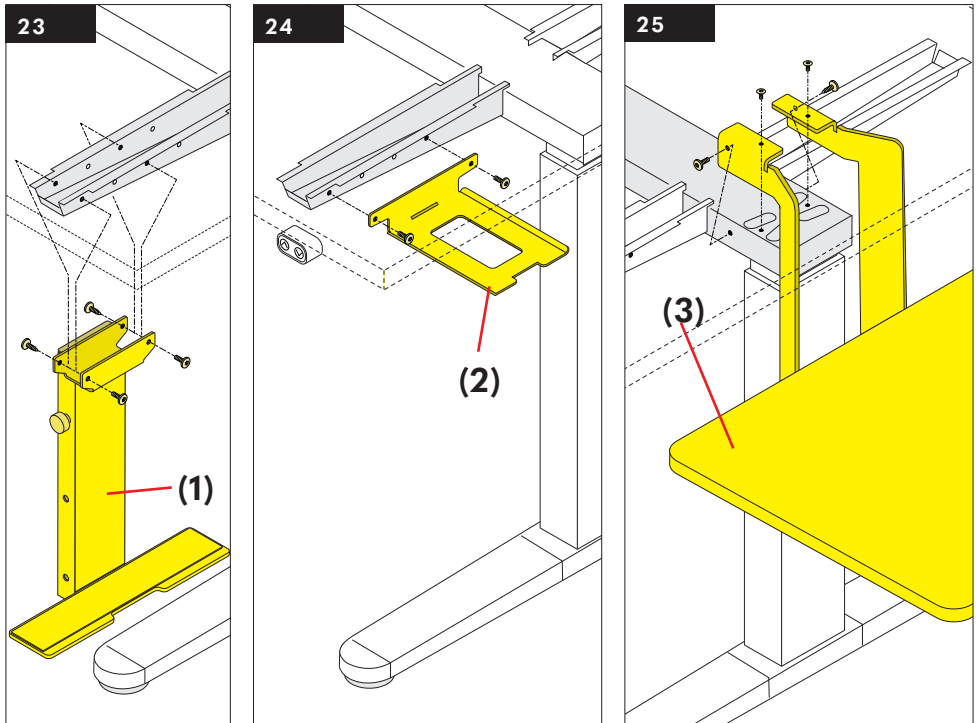


7.5 Table spacers [Figure 1-2]

Position the table spacers for the side **(1)** and front **(2)** linking of tables in such a way that the table feet engage with the corresponding recess. The anti-rotation protection **(3)** of the distance piece must hook into the corresponding opening on the lower side of the table foot. If both types of table spacer are used at one and the same table foot then the side spacer is located above the front spacer.




Caution! Table spacers ensure that the necessary safety distance of 25 mm is observed.

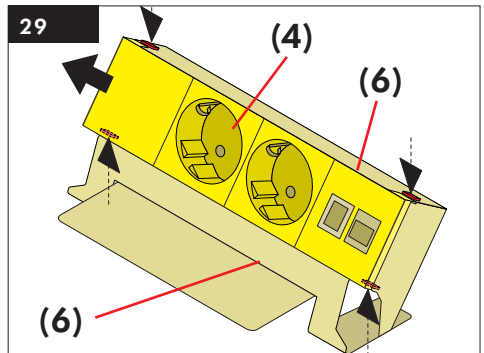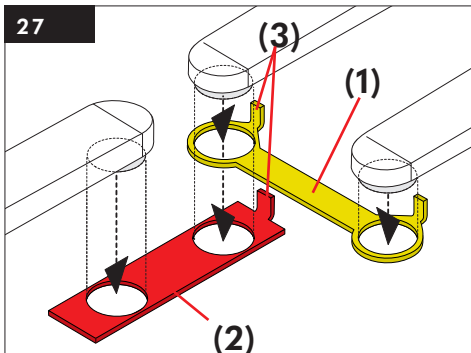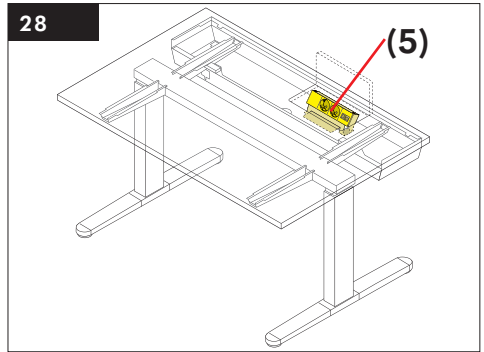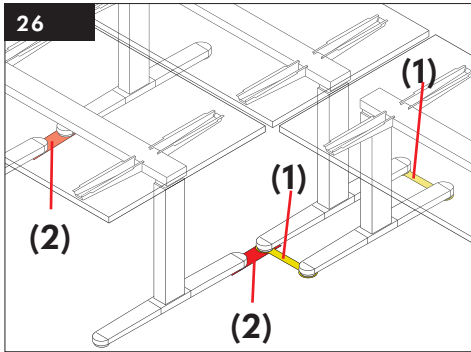

7.6 Electrical connection flap/E-box [Figure 3-4]

The socket block (4) in the electrical connection flap/E-box (5) can be released by pulling it out of the housing (6) in order to perform the cabling of the table. To insert, press on the block until it audibly engages in the holder.

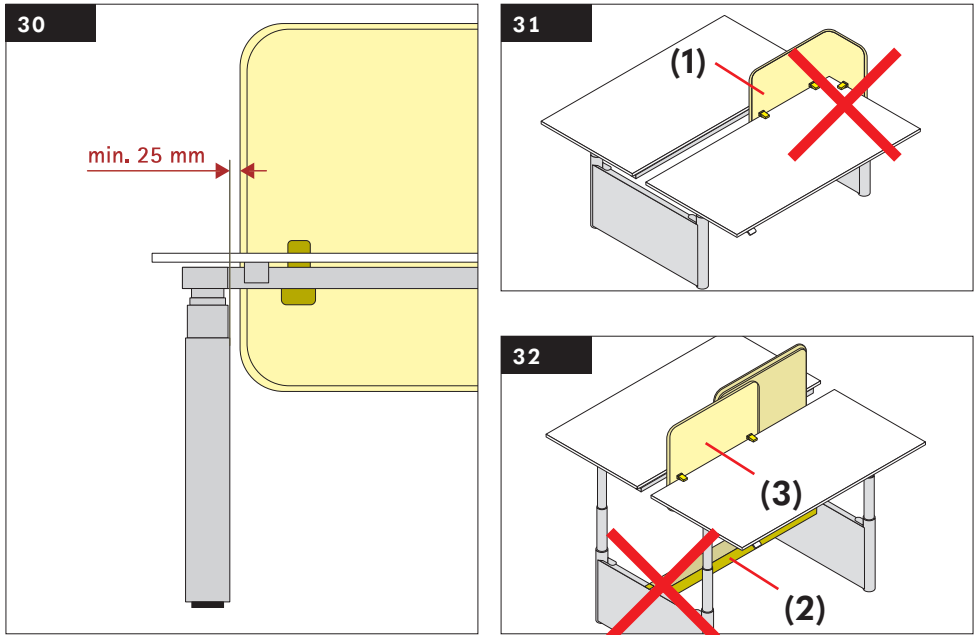

8. Twin dual desk


The following should be noted in the case of the Twin dual desk with moving screens

- Screens that move straight must be moved in at the left and right in the area of the end panel in order to prevent pinching between the end panel and the screen. Safety distances of 25 mm must be respected **[Figure 30]**.
- A moving ScreenPlus corner screen **(1)** is not permitted **[Figure 31]!**
- A hollow tray **(2)** is not permitted in combination with moving screens **(3)** **[Figure 32]!**




Caution! When using the drive, make sure that no objects or body parts are trapped!

9. Technical data

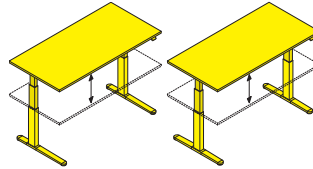

Name	C-type/T-type foot
The height depends on the choice of variant:	from 65 to 125 cm
Maximum lifting load at	75 kg (full surface area)
Operating time	2 minutes "ON" and 18 minutes "OFF" safety shut-off
Ambient temperature for operation	must not be below +0°C and must not exceed + 35 °C
Safety range	End position approx. 11 cm above lowest table height
Sound emissions	< 50 dB(A)
Travel speed	38 ± 2 mm/sec
Relative humidity	5 to 85
Power supply	230 V
Power consumption	300 W when operating with a load
Protection type, IP class	IPX0
Protection class	II
Frequency range	50 Hz
Standby power, primary (typical)	0.1 W

33

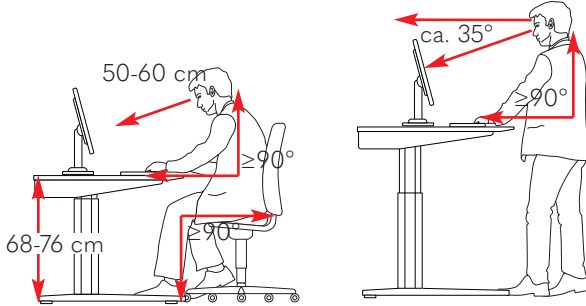

10. Notes on ergonomic use

- Seated/standing workplaces allow you to organize your work in a particularly flexible way. Thanks to the possibility of adjusting the height of the entire working area together with the screen and input devices, it is possible to perform practically any activity either seated or standing.
- **Recommendations:**
 - A. It is better to stand frequently for short periods than to remain standing for a long time.
 - B. You should avoid standing with a static posture.
 - C. 2 to 4 changes of posture per hour are advised **[Figure 23]**.
- The screen should be positioned in such a way that there are no reflections on it due, for example, to the lighting or windows. Ideally, you should position the screen in such a way that it is located between two lighting strips and you are looking at it parallel to a window.

The top line on the screen should not be above the horizontal visual axis. To permit a comfortable head position, you should look downwards at the centre of the screen at an angle of approximately 35°
[Figure 33].

- *The height adjustment mechanism also makes it easy to adjust the correct seating height. If possible, only sit on furniture that is ergonomically shaped and is height-adjustable. The backrest should provide optimum support for the lumbar vertebrae. Observe the manufacturer's instructions about how to adjust the chair exactly to your body size and shape.*
- *The Council of the European Community has introduced various directives and regulations for workplace ergonomics and these are subject to EC Directive 90/270/EEC.*
- *A guideline on the design of screen and office workplaces has been issued by the Verwaltungs-Berufsgenossenschaft in its series of publications on accident prevention (German Social Accident Insurance regulation 215-410).*

*For more detailed information, go to **www.vbg.de***

11. EU Declaration of Conformity

Firma: VS Vereinigte Spezialmöbelfabriken GmbH & Co. KG
Hochhäuser Straße 8
D-97941 Tauberbischofsheim

Typologie: Sitz- Steharbeitsplatz
Benennung: Sitz- Steharbeitsplatz-Serie 910
Modell-Nr.: Modell 21831, 22831 / 21851, 22851 Tisch 120x80 cm
Modell 21832, 22832 / 21852, 22852 Tisch 140x80 cm
Modell 21833, 22833 / 21853, 22853 Tisch 160x80 cm
Modell 21834, 22834 / 21854, 22854 Tisch 180x80 cm
Modell 21835, 22835 / 21855, 22855 Tisch 200x80 cm
Modell 21841, 22841 / 21861, 22861 Tisch 120x90 cm
Modell 21842, 22842 / 21862, 22862 Tisch 140x90 cm
Modell 21843, 22843 / 21863, 22863 Tisch 160x90 cm
Modell 21844, 22844 / 21864, 22864 Tisch 180x90 cm
Modell 21845, 22845 / 21865, 22865 Tisch 200x90 cm
Modell 21858, 22858 Doppeltisch 2x 160x80 cm
Modell 21859, 22859 Doppeltisch 2x 180x80 cm
Modell 21868, 22868 Doppeltisch 2x 160x90 cm
Modell 21869, 22869 Doppeltisch 2x 160x90 cm

Ausführung: C-Fuß / T-Fuß
Sonderausstattung: - / -

Hiermit wird bestätigt, dass das oben bezeichnete Produkt den Bestimmungen folgender EU-Richtlinien entspricht.

Maschinenrichtlinie	2006/42/EG
Ggf. andere einschlägige EU-Richtlinien:	
EMV-Richtlinie	2014/30/EU
RoHS Richtlinie	2011/65/EU

Hinsichtlich der elektrischen Gefahren wurden gemäß Anhang I Nr. 1.5.1 der Maschinenrichtlinie 2006/42/EG die Schutzziele der Niederspannungsrichtlinie 2014/35/EU eingehalten.

Die Bluetooth-Handschalter unterliegen darüber hinaus der RED-Richtlinie 2014/53/EU.



*Das Produkt darf nicht über den Hausmüll entsorgt werden.
Die Entsorgung erfolgt an zugelassenen Sammel- und
Rücknahmestellen.*

Tauberbischofsheim, den 03.06.2019

[Signature]
Unterschrift
Heller, Jens
Name, Vorname

Jens Heller
CE-Dokumentations-Bevollmächtigter

Funktion: Bereichsleitung
Produktentwicklung und Serienkonstruktion

VS Vereinigte Spezialmöbelfabriken GmbH & Co. KG
Sitz: Tauberbischofsheim
Registergericht: Amtsgericht Mannheim HRA 560116
U.S.I.d.Nr.: DE 146587381
Internet: <http://www.vs-moebel.de>
(KONFORMITÄTSERLÄUTERUNG_5910_Twin.doc)

Geschäftsführer:
Prof. Dr. Ing. Thomas Müller, Bernhard Schwing, Jörg Blumenstock
Komplementär:
VS Vereinigte Spezialmöbelfabriken Verwaltungs-GmbH
Sitz: Tauberbischofsheim
Registergericht: Amtsgericht Mannheim HRB 560029

Bankverbindungen:
Sparkasse Tauberfranken BLZ 673 525 65 Kto. 2 000 826
Landesbank Baden-Württemberg BLZ 600 501 01 Kto. 2 050 302
Volksbank Main-Tauber eG BLZ 673 900 00 Kto. 70 321 907
Deutsche Bank Würzburg BLZ 790 700 16 Kto. 22 623 300
Dresdner Bank Würzburg BLZ 790 800 52 Kto. 323 530 000